



# Model Pro EXW 50/2 Parts List (rev. 5 - 2008)

1 - End Housing Screw (16 req.)	EXW502-001	37- Cam Housing Screw (2 req.)	EXW502-037	75- Crank Arm Nut	EXW502-075
2 - End Cap Housing	EXW502-002	38- Cam Housing Washer (2 req.)	EXW502-038	76- Lock Plate	EXW502-076
3 - Dog Spring (2 req.)	EXW502-003	39- End Housing	EXW502-039	77- Release Arm Spring	EXW502-077
4 - Spring Screw (2 req.)	EXW502-004	40- Spacer (3 req.)	EXW502-040	78- Spring Pin	EXW502-078
4A- Washer (2 req.)	EXW502-004A	41- Slide Plate	EXW502-041	79- Release Arm	EXW502-079
5 - End Cap Bearing	EXW502-005	42- Plate Screw (3 req.)	EXW502-042	80- Push Knob	EXW502-080
6 - Under Dog Washer (2 req.)	EXW502-006	43- Drag Arm	EXW502-043	81- Crank Arm Cover	EXW502-081
7 - Dog (2 req.)	EXW502-007	44- Drag Knob Head	EXW502-044	82- Cover Screws (2 req.)	EXW502-082
8 - Harness Lag (2 req.)	EXW502-008	45- Knob Slide	EXW502-045	83A- Handle Shaft Washer	EXW502-083A
9 - Screws (8 req.)	EXW502-009	46- Drag Button E-Clip	EXW502-046	83- Handle Knob Shaft	EXW502-083
10- Body	EXW502-010	47- Drag Knob Nut	EXW502-047	84- Handle Shaft Bearing	EXW502-084
11- Limit Pin E-Clip (2 req.)	EXW502-011	48- Drag Button Spring	EXW502-048	85- Handle Shaft Tube	EXW502-085
12- Limit Pin Sleeve (2 req.)	EXW502-012	49- Drag Button	EXW502-049	86- Knob Bearing	EXW502-086
13- Limit Pin Spring (2 req.)	EXW502-013	50- N/A	N/A	87- Spring Washer	EXW502-087
14- "Full" Limit Pin	EXW502-014	51- Preset Button C-Clip	EXW502-051	88- Lock Washer	EXW502-088
15- "Free" Limit Pin	EXW502-015	52- Cover Plate	EXW502-052	89- Nut	EXW502-089
16- Left Break Screw	EXW502-016	52A-Plate Washer (3 req.)	EXW502-052A	90- Handle Knob	EXW502-090
17- L/B Lock Washer	EXW502-017	53- O-Ring	EXW502-053	91- Clicker Guide Screw	EXW502-091
17A-L/B Washer	EXW502-017A	54- Cover Plate Screw (3 req.)	EXW502-054	92- Lock Washer	EXW502-092
18- Left Brake	EXW502-018	55A- Preset Knob Ball-Spring	EXW502-055A	93- N/A	N/A
19- Brake Disc Pin E-Clip (3 req.)	EXW502-019	55- Preset Knob	EXW502-055	94- Guide Pin	EXW502-094
20- Disc Brake	EXW502-020	56- Stop Nut	EXW502-057	95- N/A	N/A
21- Brake Pin Spring (3 req.)	EXW502-021	57- Left Washer	EXW502-057	96- Clicker Guide	EXW502-096
22- Shaft End Pin (2 req.)	EXW502-022	58- Low Speed Gear	EXW502-058	97- Clicker Position Spring	EXW502-097
23- Brake Retracting Spring	EXW502-023	59- Center Washer	EXW502-059	98- Clicker Position Ball	EXW502-098
24- Right Brake	EXW502-024	60- High Speed Gear	EXW502-060	99- Clicker Pin	EXW502-099
25- Spool Bearing (2 req.)	EXW502-025	61-Right Washer	EXW502-061	100-Clicker Spring	EXW502-100
26- Spool	EXW502-026	62- Shaft Fork	EXW502-062	101-Clicker C-Ring	EXW502-101
26B-Clicker Plate	EXW502-026B	63- Fork Spring	EXW502-063	102-Clicker Spacer Washer	EXW502-102
27- Spool Tube	EXW502-027	64- Pusher	EXW502-064	103-Clicker Plastic Washer	EXW502-103
28- Spool Shaft Gear Assembly	EXW502-028	65- Pusher Spring	EXW502-065	104-Clicker Spacer Tube	EXW502-104
28B-Locking Dowell Pin	EXW502-028B	66- Drive Shaft	EXW502-066	105-Clicker Head Pin	EXW502-105
29- Belleville Washers (4 req.)	EXW502-029	67- Pusher Washer	EXW502-067	106-Clicker Knob	EXW502-106
30- Spacer Washer	EXW502-030	68- Pusher E-Clip	EXW502-068	107-Rod Mount	EXW502-107
31- Low Speed Pinion Gear	EXW502-031	69- Drive Shaft Bearing (2 req.)	EXW502-069	108-Mount Screw (4 req.)	EXW502-108
32- Gear Bearing	EXW502-032	70- Drive Shaft Tube	EXW502-070	109-Rod Mount Bolt (2 req.)	EXW502-109
33- Preset Nut	EXW502-033	71- Drive Shaft Washer	EXW502-071	110-Rod Mount Clamp	EXW502-110
34- Male Cam	EXW502-034	72- Crank Arm	EXW502-072	111-Clamp Nut (2 req.)	EXW502-111
35- Female Cam	EXW502-035	73- Washer	EXW502-073		
36- Cam Housing	EXW502-036	74- Push Pin E-Clip	EXW502-074		