


SPINNING REEL

**REGAL-X1505T/2005T**

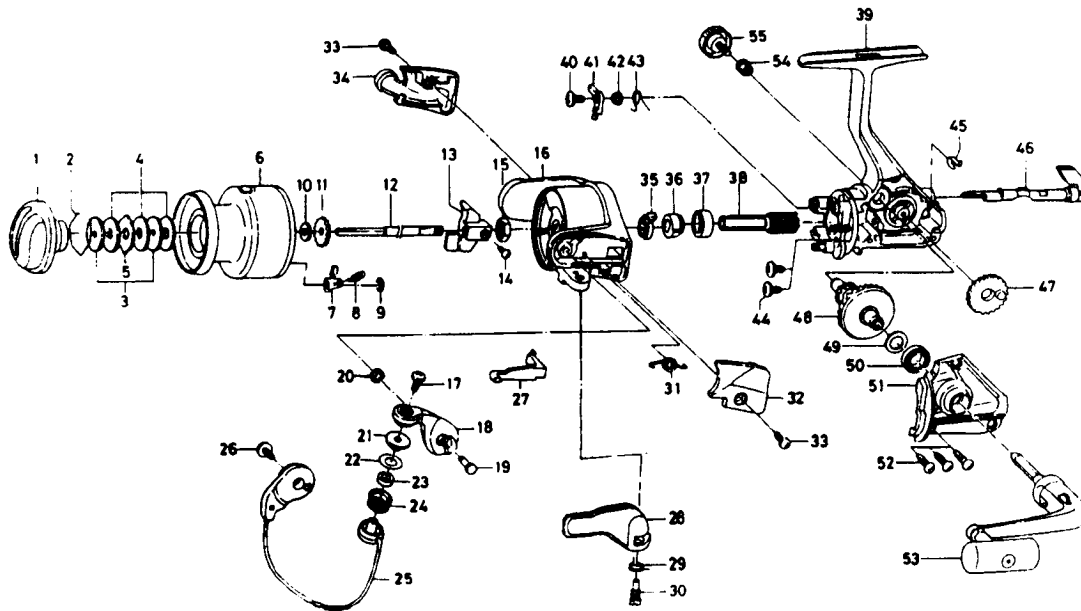

Key No.	Parts No.	Parts Name
2-9	F49-0601	Spool assembly
1	F32-8506	Drag knob
2	F37-3301	Drag washer retainer
3	E46-7201	Key washer
4	E13-6001	Drag washer
5	373-3603	Eared washer
6	F49-0701	Spool assembly
7	B07-5304	Click pawl
8	E40-3101	Click spring
9	320-5901	Click retainer
10	E46-7101	Spool washer
11	270-6501	Click gear
12	F46-0801	Main shaft
13	F12-2301	Oscillating slider
14	351-0311	Oscillating slider screw
15	341-9201	Rotor nut
16	F33-1406	Rotor assembly
17	B67-9308	Line roller screw
18	F47-3802	Bail arm
19	E49-3501	Bail arm screw
20	320-5901	Bail arm screw retainer
21	F44-6302	Line roller collar
22	F44-6201	Line roller washer
23	F47-3401	Line roller bushing
24	F45-4902	Line roller
25	F49-0901	Bail assembly
26	B84-2102	Bail trip cam screw
27	E49-6401	Bail trip lever
28	E49-3408	Trigger lever
29	E36-9901	Trigger spring
30	E37-0002	Trigger screw
31	E49-6801	Bail spring
32	F32-4106	Bail spring cover
33	E24-8101	Bail spring cover screw
34	F32-6506	Bail trip cover

Key No.	Parts No.	Parts Name
35	F12-2101	Anti-reverse ratchet A/R pawl spring A
36	E49-8501	Spring holder
37	634-1301	Ball bearing A
38	F12-1601	Pinion gear
39	F49-0302	Body assembly
40	F12-5701	Anti-reverse pawl screw
41	F12-1901	Anti-reverse pawl
42	F12-3501	Anti-reverse pawl collar
43	F12-3401	Anti-reverse pawl spring B
44	E03-7801	Bearing retainer screw
45	F12-2001	Anti-reverse cam spring
46	F08-5122	Anti-reverse lever
47	F12-2201	Oscillating gear
48	F12-1501	Drive gear
49	375-8507	Drive gear washer
50	634-1301	Ball bearing B
51	F49-0402	Side cover
52	E15-8602	Side cover screw
53	F50-7501	Handle assembly
54	F40-4801	Handle collar
55	B92-5011	Handle lock screw

**X2005T SPECIAL PARTS**

Key No.	Parts No.	Parts Name
2-9	F49-2001	Spool assembly
6	F49-2101	Spool assembly
16	F39-9806	Rotor assembly
25	F49-2201	Bail assembly
27	E49-6501	Bail trip lever
39	F49-0304	Body assembly
51	F49-0404	Side cover