



Key No.	Parts No.	Parts Name	Key No.	Parts No.	Parts Name
1	6-B12-0101	L. S. ring	30	6-B12-0401	Clutch lever
2	6-353-6201	L. S. plate screw	31	6-160-8001	Clutch lever lock washer
3	6-B12-1801	Frame	32	6-363-5301	Clutch lever screw
4	6-541-6501	Click button	33	6-145-2801	Anti-reverse claw spring
5	6-375-9301	Click button washer	34	6-B12-0701	Anti-reverse claw
6	6-375-1101	Click claw washer A	35	6-B12-0201	Spool adjusting cap metal
7	6-030-6611	Click claw	36	6-637-0601	Friction ring
8	6-373-1600	Click claw washer B	37	6-B12-7801	Spool adjusting cap
9	6-320-1402	Click claw retainer	38	6-B34-3301	Set plate screw
10	6-353-9801	Rod clamp screw	39	6-B12-1101	Gear shaft
11	6-341-9701	Rod clamp nut	40	6-375-2901	Drive gear washer
12	6-041-5601	Rod clamp	41	6-B12-1401	Drive gear
13	6-342-2111	Rod clamp wing nut	42	6-B12-1501	Drag washer A
14	6-375-7403	Ball bearing metal washer	43	6-375-6205	Drag washer B
15	6-633-8811	Ball bearing	44	6-375-6302	Drag washer C
16	6-B12-2101	Click spring retainer	45	6-375-6204	Drag washer D
17	6-160-7922	Click spring	46	6-B26-8401	Spacing sleeve
18	6-351-7701	Click spring screw	47	6-151-8701	Tension spring
19	6-B12-2201	Spool	48	6-782-5304	Star drag
20	6-B30-7901	Set plate	49	6-B17-2801	Handle washer
21	6-636-6401	Ball bearing	50	6-B12-1603	Handle
22	6-170-7701	Ball bearing retainer	51	6-B10-5701	Handle nut
23	6-750-6012	Pinion gear	52	6-371-0604	Handle nut washer
24	6-B11-9802	R. S. plate	53	6-320-7601	Handle nut retainer
25	6-041-5701	Eccentric jack	54	6-B15-2301	Handle nut plate
26	6-041-5801	Pinion yoke	55	6-351-1801	Handle nut plate screw
27	6-145-2411	Clutch spring	56	6-B03-7201	Set plate screw retaining nut
28	6-B12-0301	Eccentric cam	57	6-B35-2501	Clutch lever screw holder
29	6-B12-0601	Eccentric cam spring			