



Key No.	Parts No.	Parts Name	Key No.	Parts No.	Parts Name
1	6-171-6201	L. S. ring	28	6-145-2501	Eccentric cam spring
2	6-353-6201	L. S. plate screw	29	6-782-5401	Clutch lever
3	6-783-3502	Frame	30	6-160-8001	Clutch lever lock washer
4	6-541-6501	Click button	31	6-363-5301	Clutch lever screw
5	6-375-9301	Click button washer	32	6-145-2801	Anti-reverse claw spring
6	6-375-1101	Click claw washer A	33	6-812-0701	Anti-reverse claw
7	6-030-6221	Click claw	35	6-840-3001	Set plate screw
8	6-373-1600	Click claw washer B	36	6-171-1001	"O" ring
9	6-320-1402	Click claw retainer	37	6-145-3101	Spool adjusting spring
10	6-353-9801	Rod clamp screw	38	6-375-7501	Spool adjusting cap metal
11	6-341-9701	Rod clamp nut	39	6-382-0301	Spool adjusting cap
12	6-041-5601	Rod clamp	40	6-375-2901	Drive gear washer
13	6-342-2111	Rod clamp wing nut	41	6-413-9511	Drive gear
14	6-375-9802	Friction ring	42	6-375-9902	Drag washer A
15	6-171-1001	"O" ring	43	6-376-3401	Drag washer B
16	6-720-2711	Case metal	44	6-376-3501	Drag washer C
17	6-160-7921	Click spring	45	6-376-3601	Drag washer D
18	6-351-7701	Click spring screw	46	6-501-9311	Spacing sleeve
19	6-733-3013	Spool	47	6-151-8701	Drag spring washer
20	6-782-5502	Set plate	48	6-782-5304	Star drag
21	6-750-6011	Pinion gear	49	6-151-9701	Handle washer
22	6-720-2321	Ball bearing metal	50	6-747-4211	Handle
23	6-760-4912	R. S. plate	51	6-780-7502	Handle screw
24	6-041-5701	Eccentric jack	52	6-353-2811	Handle lock screw
25	6-041-5801	Pinion yoke	53	6-803-7201	Set plate screw retaining nut
26	6-145-2411	Clutch spring	54	6-835-2601	Clutch lever screw holder
27	6-461-6801	Eccentric cam			