


BAITCASTING REEL
PROLITE 100 & 1000

Special Parts For PL-100

Key No. 17 Key No. 22

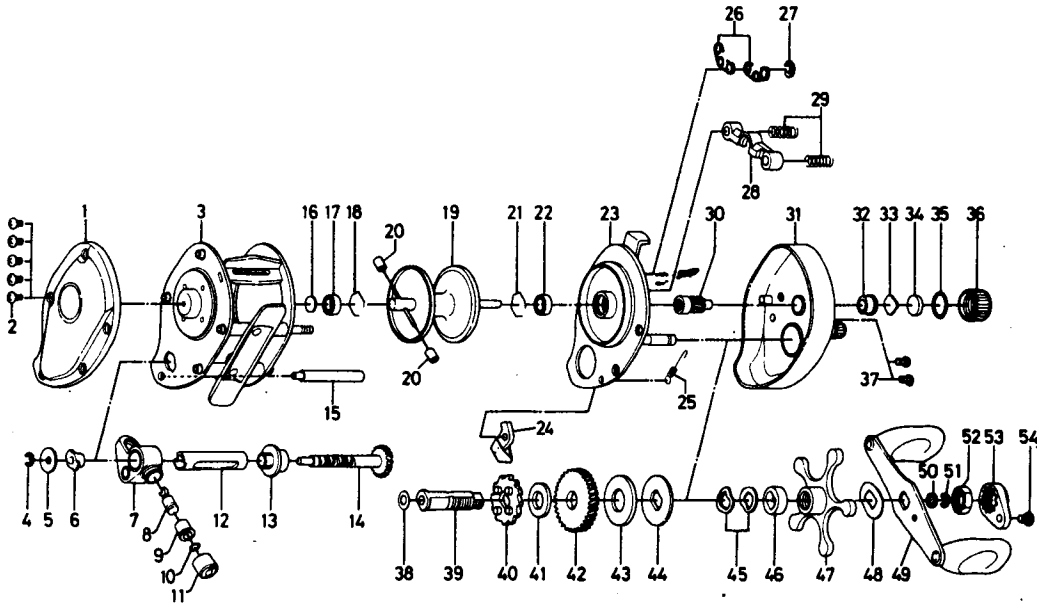

Key No.	Parts No.	Parts Name
1	6-B36-1301	Left side cover
2	6-B36-0401	Left side cover screw
3	6-B36-1501	Frame
4	6-320-5901	Worm shaft retainer
5	6-376-1801	Worm shaft holder washer
6	6-022-2201	Worm shaft holder
7	6-782-8801	Line guide
8	6-121-4211	Line guide pin
9	6-022-2901	Line guide pin holder
10	6-375-4100	Line guide washer
11	6-342-4801	Line guide nut
12	6-B36-2601	Worm shield
13	6-B36-1201	Shield bush
14	6-B36-3101	Worm shaft
15	6-B36-3401	Frame post
16	6-375-7405	Bearing metal washer
17	6-B35-8601	Ball bearing
18	6-B42-1601	Ball bearing retainer
19	6-B36-3501	Spool
20	6-B35-2901	Brake collar
21	6-B42-1601	Ball bearing retainer
22	6-B35-8601	Ball bearing
23	6-B35-7401	Set plate
24	6-B35-9401	Anti-reverse claw
25	6-B35-8901	Anti-reverse claw spring
26	6-B36-9101	Set plate spring
27	6-320-1402	Clutch ret. ring
28	6-B35-9001	Pinion yolk
29	6-144-7101	Pinion yolk spring
30	6-B35-9101	Pinion gear
31	6-B35-6601	Right side cover
32	6-B35-7201	Bush
33	6-B17-5401	Ball bearing ret. washer

Key No.	Parts No.	Parts Name
34	6-B17-5501	Bearing metal washer
35	6-171-5201	"O" ring
36	6-B35-7301	Right spool cap
37	6-B36-0401	Right side cover screw
38	6-373-7611	Gear shaft washer A
39	6-B35-9601	Gear shaft
40	6-B35-9701	Ratchet
41	6-B36-0001	Gear shaft washer B
42	6-B36-0101	Drive gear
43	6-B36-0201	Drag washer A
44	6-B36-0301	Drag washer B
45	6-150-8901	Spring washer
46	6-634-5801	Bush
47	6-B36-0501	Star drag
48	6-150-9001	Handle washer
49	6-747-1701	Handle
50	6-B41-1701	Handle nut washer
51	6-320-8202	Handle nut retainer
52	6-B12-4701	Handle nut
53	6-B14-2501	Handle nut plate
54	6-351-1801	Handle nut plate screw
PL-100 Special Parts		
1	6-B36-1302	Left side cover
3	6-B41-3601	Frame
7	6-782-8803	Line guide
17	6-B41-3401	Bearing metal
19	6-B36-3502	Spool
22	6-B41-3401	Bearing metal
23	6-B41-3501	Set plate
31	6-B35-6605	Right side cover
47	6-B36-0502	Star drag
49	6-747-1704	Handle