



19

889-8975	Drag Knob Assembly	17	800-8000	Ball Trip Actuation Screw	34	859-6000	Screw (Black)	52	888-9987	Side Cover Assembly
859-3300	Retaining Ring	18	883-1600	Ball Trip Lever	35	883-1500	Ball Trip Rocker	53	859-5700	Side Cover Screw (Black)
859-3100	Double "D" Washer	19	880-7600	Ball Trip Spring	36	888-9209	A/R Friction Spring	54	888-9988	Anti-Reverse Switch
859-3200	Drag Washer	20	888-8979	Ball Arm	38	888-8983	Rotor Weight	55	803-0200	Anti-Reverse Shaft
859-3000	Eared Washer	21	842-9300	Line Guide Screw	39	808-9984	rotor	56	850-5300	Anti-Reverse Spring
888-8978	Spool, Aluminum	22	830-2900	Line Control Spring	40	888-9885	Rotor Cover Plate	57	888-0989	Body Assembly
888-8186	Spool, Graphite	23	888-9981	Line Control	41	888-9986	Cap	58	883-1900	Fixed Oscillation Gear
800-0714	Gasket Ring	24	8-2-9900	Rotor Hex Nut	42	800-5800	Ball Bearing	59	803-2500	Driver Oscillation Gear
888-9187	Spool Core Assembly	25	830-5900	Rotor Retainer Screw	43	895-2100	Anti-Reverse Sleeve	60	893-2600	Oscillation Gear
883-2800	Spindle Spool	27	883-9170	Oscillation Shaft Assembly	44	883-0700	Pinion Sleeve	61	859-0700	Oscillation Shaft Screw
859-3900	Base Drag Washer	28	883-2900	Ball	45	883-2000	Pinion	62	803-0500	Oscillation Slide
888-9977	Line Guide	29	803-8982	Ball Weight	46	850-5500	Pinion Ball Bearing	63	802-9100	Oscillation Slide Bar
880-7800	Plastic Bushing	30	803-9192	Balancing Weight Screw	47	803-1100	Pinion Bearing Retainer	64	888-9991	A/R Pawl Assembly
866-7700	Line Guide Washer	31	883-2100	Ball Spring Pin	48	859-6000	Bearing Retainer Screw	85	880-5200	Brass Sleeve
880-2500	Ball Arm Screw (Black)	32	866-1100	Ball Spring	49	809-9144	Drive Gear Assembly	86	889-8004	Drive Bearing Retainer
888-9978	Ball Trip Cover Plate	33	883-1100	Ball Pin Sheath	51	850-5600	Drive Gear Washer	67	888-9992	Crank Handle Assembly