




# PARTS LIST FOR MODEL 4GAR

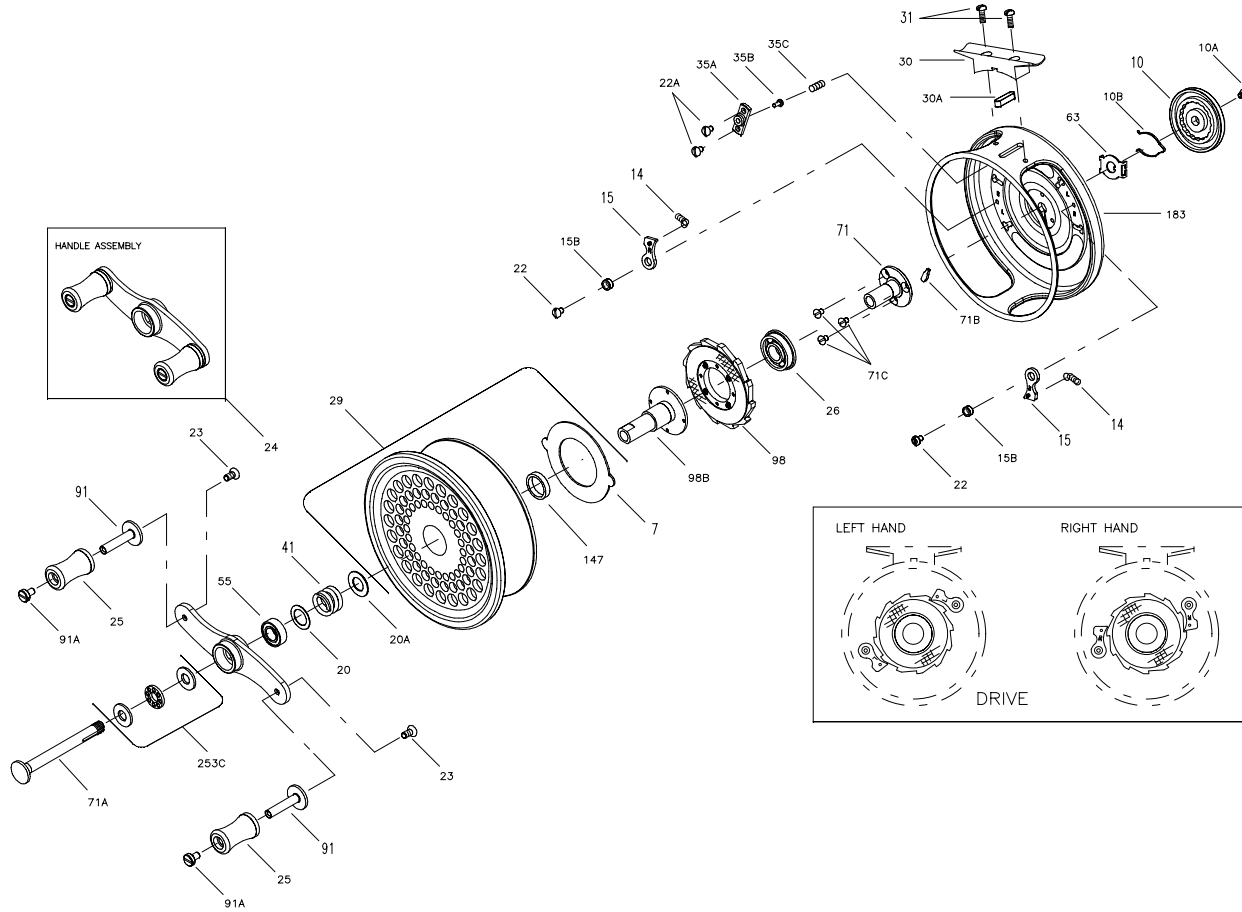

KEY NO.	PART NO.	DESCRIPTION
7	007 4GAR	Metal Drag Washer
10	010N2.5FRG	Drag Knob
10A	010A2.5FR	Retaining Screw
10B	010B2.5FR	Detent Spring
14	014 500	Dog Coil Spring (2 req.)
15	015 4FR	Dog (2 req.)
15B	015B2.5FR	Dog Bushing (2 req.)
20	020 4FR	Spool Thrust Washer
20A	020 4GAR	Spool Thrust Washer
22	022 2.5FR	Dog Screw (2 req.)
22A	022 2.5FR	Click Housing Screw (2 req.)
23	023 2.5FR	Handle Post Screw (2 req.)
24	024 4GAR	Handle Assembly (Complete)
25	025 4FR	Handle Knob (2 req.)
26	026 2.5FR	Flange Bearing
29	029L4GAR	Spool Assembly
30	030 4FRG	Stand
30A	030A2.5FR	Stabilizer Bar
31	031 2.5FR	Stand Screw (2 req.)
35A	035A2.5FR	Click Housing
35B	035B2.5FR	Click Pin
35C	107 060	Click Pin Spring
41	041 4FR	Drag Coil Spring
55	055 012H	Ball Bearing (Outer)
63	063 2.5FR	Spring Retainer
71	071 4GAR	Spindle
71A	071A4GAR	Spindle Stud
71B	071B2.5FR	Spindle Lock Pin
71C	071C2.5FR	Spindle Screw (3 req.)
91	091 4FRG	Handle Post (2 req.)
91A	091A2.5FR	Handle Screw
98	098N4GAR	Drag Washer/Ratchet
98B	098B4GAR	Spindle Sleeve
147	147N320	Spool Bushing
183	183 4GAR	Frame
253C	253C4GAR	Thrust Bearing (Complete)