



**Parts list for PENN  
1000 Baitcaster  
Speed Shifter**

**Penn Reel Parts list for:**

KEY NO	PART NO.	DESCRIPTION
1	32-2000	L.S. PLATE SCREW (2 REQ.)
2	27-1000	L.S. PLATE
3	35-2000	MAGNET KNOB CLICK
4	35A-2000	MAGNET KNOB CLICK SCREW (2 REQ.)
5	305-2000	MAGNET, ADJ. KNOB
6	40A-2000	L.S. BEARING HOUSING
7	40C-2000	L.S. BEARING HOUSING SCREW (3 REQ.)
8	40B-2000	L.S. THRUST WASHER
9	55-2000	SPOOL BEARING (2 REQ.)
10	302A-2000	MAGNET HOUSING ASSEMBLY
13	303A-2000	MAGNET ROTOR ASSEMBLY
14	29L-2000	SPOOL COMPLETE
16	172-2000	FLIPPING SELECTION BUTTON
17	183-1000	FRAME
18	171-2000	FLIPPING BUTTON ROD
19	21B-2000	PIN
20	15A-2000	INTERNAL GEAR DOG
21	69-2000	FREE SPOOL BUTTON
22	11B-2000	CLUTCH SLIDE LEVER PIN
23	11A-2000	CLUTCH SLIDE LEVER
23A	18C-2000	CLUTCH LOCK SPRING
24	11C-2000	SLIDE LEVER PIN COLLAR
25	11-2000	CLUTCH SLIDE PLATE
26	11D-2000	CLUTCH SLIDE SPRING
27	11E-2000	FLAT WASHER (2 REQ.)
28	11F-2000	RTNG. RING CLUTCH SLIDE
29	21-2000	THUMB BAR
30	21A-2000	THUMB BAR SPRING
31	69A-2000	WORM RETAINING RING
32	44-2000	L.S. WORM SLEEVE
33	133A-1000	TOP COVER ASSEMBLY
34	46-2000	LINE GUIDE CARRIAGE
34A	37-2000	LINE GUIDE POST
35	50-2000	WORM SHIELD
36	47-2000	PAWL
37	48-2000	PAWL COVER SCREW
38	3-2000	CLUTCH LOCK PLATE
39	16-2000	CLUTCH LOCK PLATE SCREW
41	43-2000	R.S. WORM SLEEVE
42	42-1000	WORM ASSEMBLY
43	15-2000	ANTI-REVERSE DOG
44	14-2000	DOG SILENCER
45	13-1000	PINION GEAR/COLLAR
47	12-2000	CLUTCH YOKE

**Model: 1000 Conventional Baitcaster**

KEY NO	PART NO.	DESCRIPTION
48	18-2000	CLUTCH YOKE SPRING (2 REQ.)
49	127-2000	HANDLE SHAFT BUSHING
50	82-2000	HANDLE SHAFT WASHER
51	97-1000	HANDLE SHAFT
52	173-2000	CLUTCH CAM PLATE
53	98-2000	ANTI-REVERSE RATCHET
54	6B-2000	RATCHET DISC
55	5-1000	DRIVE GEAR ASSEMBLY
56	6C-2000	PRE-SET DISC (2 REQ.)
57	7-1000	METAL WASHER
58	5A-2000	DRAG SPACE COLLAR
59	9C-1000	DRAG SPACE COLLAR
60	5E-2000	INTERNAL GEAR
61	5F-2000	INT. STOPPER SPRING
62	86-2000	KEYED DRAG WASHER
63	6-2000	DRAG WASHER
64	117-2000	DRAG PRESURE PLATE
65	9B-2000	SHIM
66	9A-2000	R.S. PLATE BUSHING
67	38-2000	R.S. PLATE SCREW (TOP) (2 REQ.)
68	1-1000	R.S. PLATE
69	31-2000	R.S. PLATE SCREW (BOTTOM)
70	103B-2000	SPOOL TENSION WASHER (2 REQ.)
71	57-2000	SPOOL TENSION SPRING
72	103A-2000	R.S. THRUST WASHER
73	103-2000	SPOOL TENSION KNOB
74	7A-1000	METAL DRAG WASHER
75	18B-1000	DRAG SPRING WASHER
76	10B-2000	STAR CLICK SPRING (2 REQ.)
77	10A-1000	STAR CLICK HOLDER
78	10-1000	DRAG STAR
79	18A-2000	WAVE SPRING (2 REQ.)
80	144A-2000	PRE-SET CLICK HOLDER
81	144-2000	PRE-SET KNOB
81A	4-2000	PRE-SET KNOB WASHER
82	8-1000	HANDLE PLUG
83	24C-2000	HANDLE (COMPLETE)
84	23-1000	HANDLE SCREW
85	110A-2000	HANDLE NUT COVER
86	23A-2000	HANDLE LOCK SCREW
87	91-2000	ISOLATION RETAINING RING
88	21C-2000	THUMB BAY SCREW