


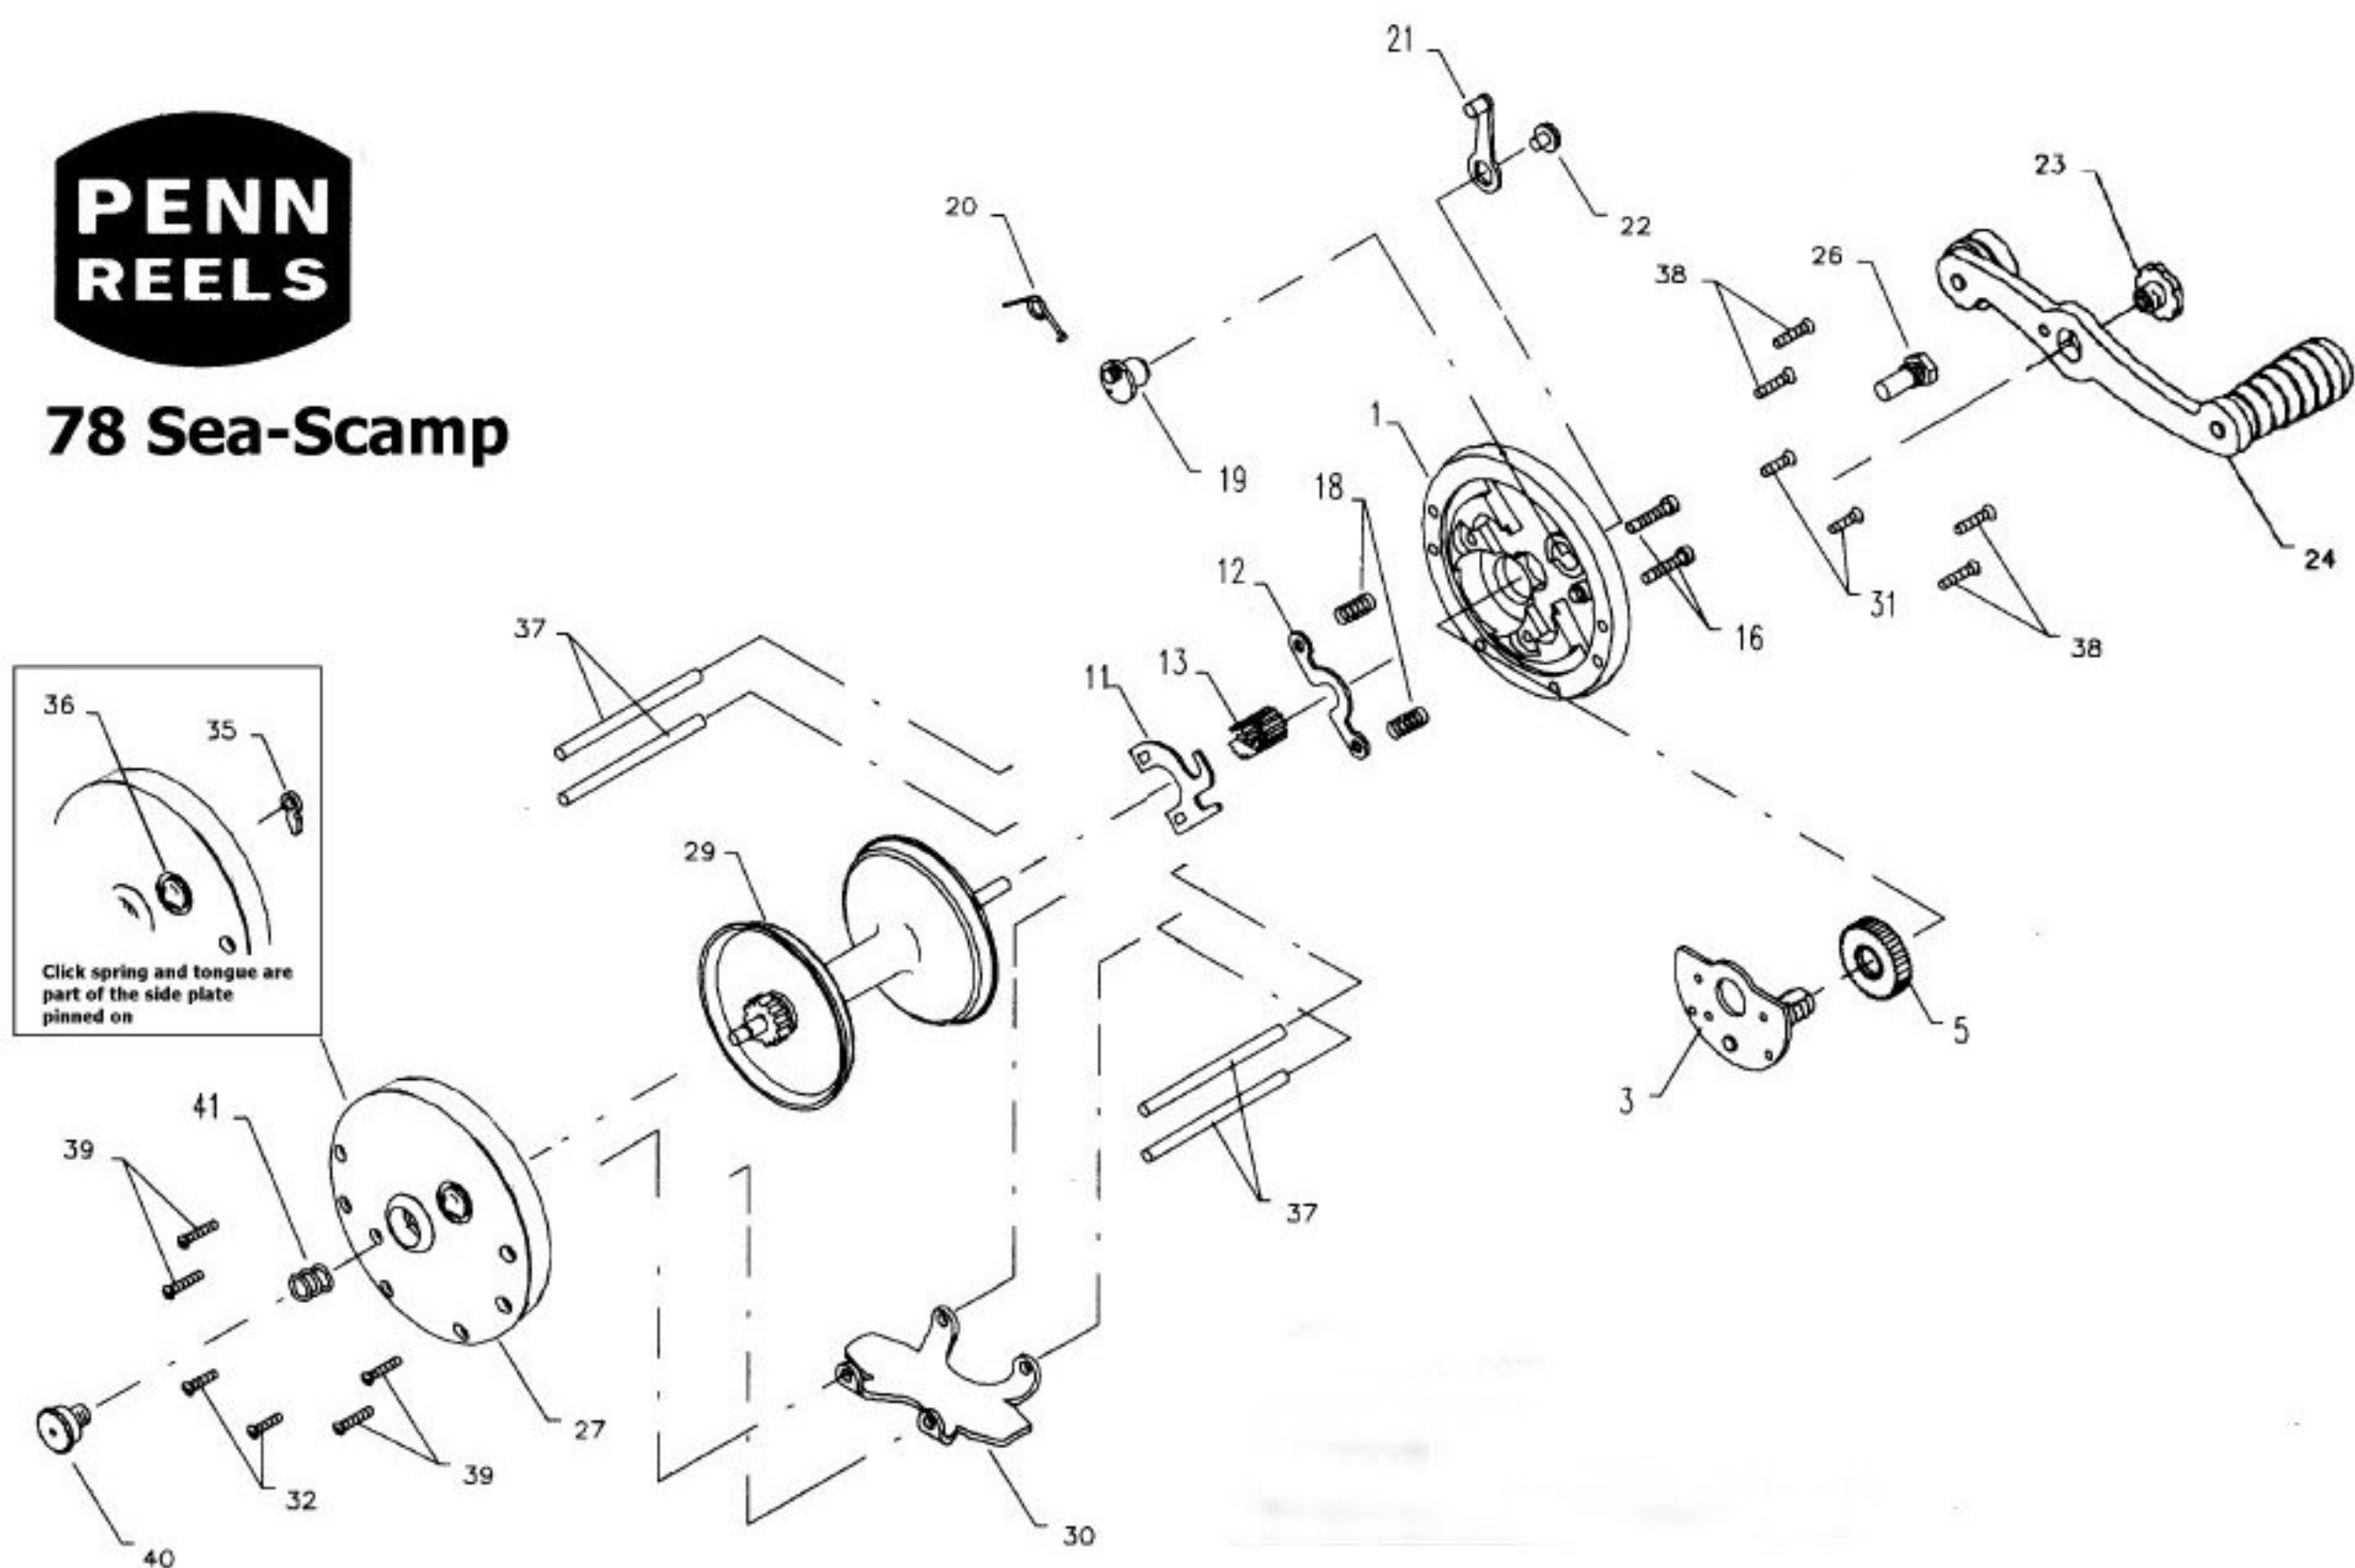

78 Sea-Scamp



Penn Reel Parts list for:

Model: 78

Sea-Scamp

KEY PART

NO	NO.	DESCRIPTION
1	1-78	R.S. PLATE
3	3-78	BRIDGE W/ SLEEVE
5	5-78	MAIN GEAR
11	11-78	ECCENTRIC JACK
12	12-60	PINION YOKE
13	13-85	PINION GEAR
16	16-78	LOWER BRIDGE SCREW
18	18-60	CLUTCH SPRING
19	19-60	ECCENTRIC
20	20-60L	ECCENTRIC SPRING
21	21-66	ECCENTRIC LEVER
22	22-60CH	ECCENTRIC SCREW
23	23-85	HANDLE SCREW
24	24-85	COMPLETE HANDLE
25	25-85	KNOB, RIVET & OILER

KEY PART

NO	NO.	DESCRIPTION
26	26-60	R.S. BEARING
27	27-78	L.S. PLATE
29	29-78	PLASTIC SPOOL
30	30-78	STAND
31	32-18	R.S. STAND SCREW
32	32-16CH	L.S. STAND SCREW
35	35-60	CLICK TONGUE
36	36-60CH	CLICK BUTTON
37	37-180	POST FRAME
38	39-5	R.S. POST SCREW
39	39-8	L.S. POST SCREW
40	40-60	L.S. BEARING
41	41-60	L.S. BEARING SPRING