


JHX™ 1000F

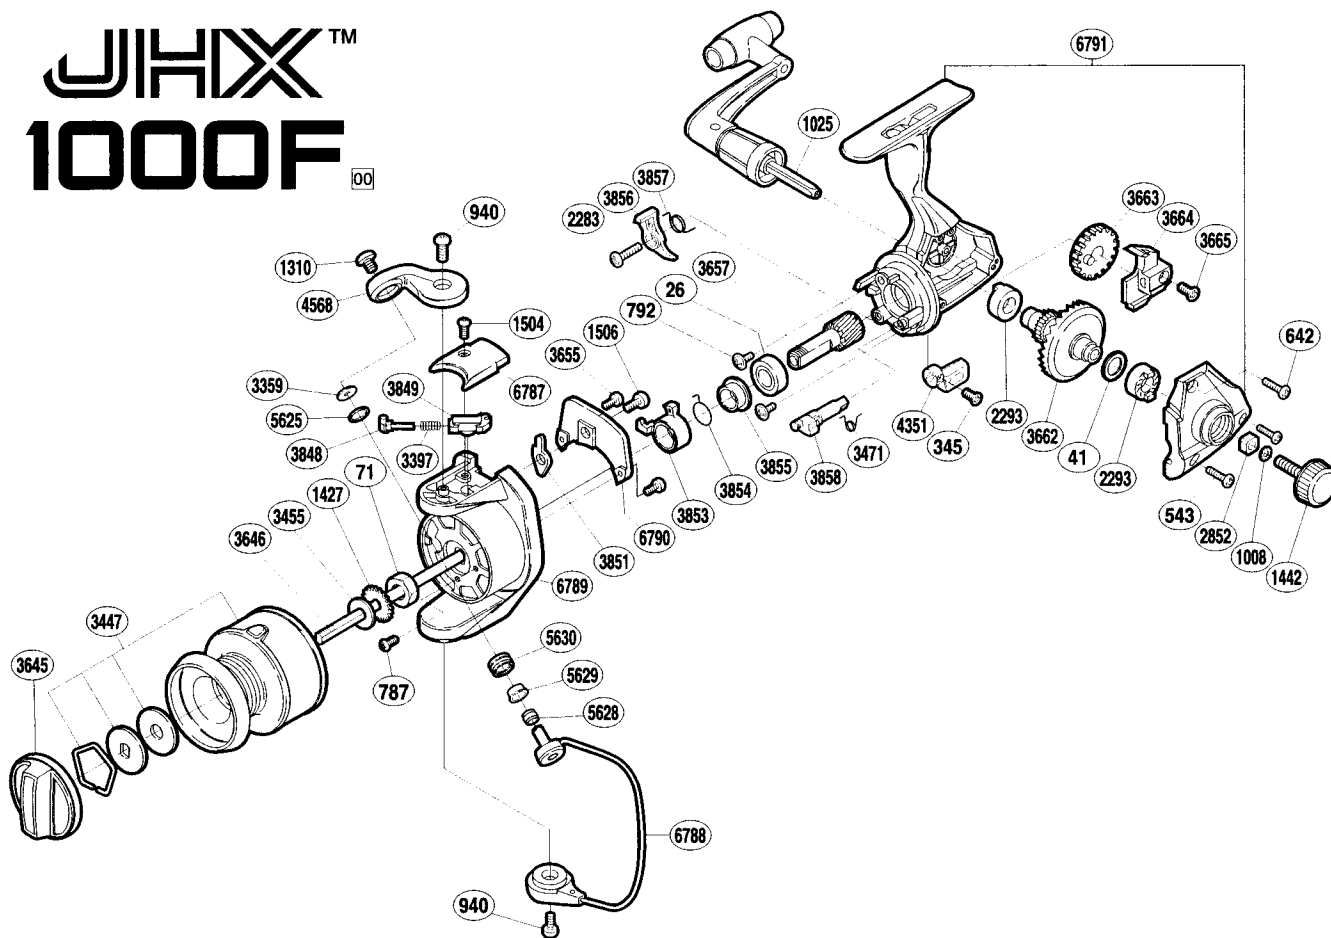

Part No.	Description	Part No.	Description	Part No.	Description
RD 0026	Ball Bearing	RD 2852	Handle Screw Lock	RD 3854	Anti-Reverse Lock Out Spring
RD 0041	Drive Gear Washer	RD 3359	Line Roller Washer	RD 3855	Lock Out Spring Holder
RD 0071	Rotor Nut	RD 3397	Bail Spring	RD 3856	Anti-Reverse Pawl
RD 0345	Anti-Reverse Lever Screw	RD 3447	Spool Assembly	RD 3857	Anti-Reverse Pawl Spring
RD 0543	Side Cover Screw (black)	RD 3455	Spool Washer	RD 3858	Anti-Reverse Cam
RD 0642	Side Cover Screw (silver)	RD 3471	Anti-Reverse Cam Spring	RD 4351	Anti-Reverse Lever
RD 0787	Nut Lock Screw	RD 3645	Drag Knob	RD 4568	Bail Arm
RD 0792	Bearing Retainer Screw	RD 3646	Main Shaft	RD 5625	Line Roller Spacer
RD 0940	Multi-Purpose Screw	RD 3655	Cover Screw	RD 5628	Line Roller Collar
RD 1008	Handle Lock Washer	RD 3657	Pinion Gear	RD 5629	Line Roller Bushing
RD 1025	Handle Assembly	RD 3662	Drive Gear	RD 5630	Line Roller
RD 1310	Line Roller Screw	RD 3663	Oscillating Gear	RD 6787	Bail Spring Cover
RD 1427	Spool Support	RD 3664	Oscillating Slider	RD 6788	Bail Assembly
RD 1442	Handle Screw Cap	RD 3665	Slider Retainer Screw	RD 6789	Rotor
RD 1504	Bail Spring Cover Screw	RD 3848	Bail Spring Guide (A)	RD 6790	Counterbalance Cover
RD 1506	Bail Trip Lever Screw	RD 3849	Bail Spring Guide (B)	RD 6791	Body Assembly
RD 2283	Anti-Reverse Pawl Screw	RD 3851	Bail Trip Lever		
RD 2293	Drive Gear Bushing	RD 3853	Anti-Reverse Lock Out		