

| PART #  | DESCRIPTION                    | "A" INTERCHANGEABILITY  | "B" INTERCHANGEABILITY   |
|---------|--------------------------------|---|--|
| RD 0028 | Ball Bearing                   | BNT0807, BR 0037, KXB0028, MLX0025, TGT0223, TLD0123, TT 0117 |  |
| RD 0041 | Drive Gear Washer              | BR 0049, RD 1524, MLX0040, XZ0150                             |  |
| RD 0071 | Rotor Nut                      | BR 0010, KXB0073, MLX0066                                     |  |
| RD 0544 | Drag Washer "C" (cloth)        | BR 0804   |  |
| RD 0787 | Nut Lock Screw                 | BNT0896, BR 0278  | RD 1111  |
| RD 0792 | Bearing Retainer Screw         | BR 0035   | RD 0358, TGT0005   |
| RD 0930 | Ball Bearing                   | BR 0047   |  |
| RD 1504 | Ball Spring Cover Screw        |   | RD 1891  |
| RD 1506 | Ball Trip Lever Screw          | BR 0470, BR 0539  | BNT0689, BR 0066, MCR0021, TGT0068, TLD0056, TT 0187, RD 0540, RD 3088 |
| RD 1888 | Anti-Reverse Lock Out Spring   |   |  |
| RD 1890 | Bushing Washer                 | TGT0224   |  |
| RD 2280 | Anti-Reverse Lock Out          |   |  |
| RD 2283 | Anti-Reverse Pawl Screw        | BR 0557   |  |
| RD 3125 | Drag Click Screw               |   |  |
| RD 3397 | Ball Spring                    |   |  |
| RD 3410 | Ball Trip Lever                |   |  |
| RD 3442 | Spool Assembly (aluminum)      |   |  |
| RD 3445 | Spool Assembly (graphite)      |   |  |
| RD 3471 | Anti-Reverse Cam Spring        |   |  |
| RD 3648 | Quick-Fire II Trigger Assembly |   | RD 3394  |
| RD 3649 | Line Roller                    |   |  |
| RD 3651 | Ball Spring Guide (A)          |   |  |
| RD 3652 | Ball Spring Guide (B)          |   |  |
| RD 3653 | Ball Spring Cover              |   | RD 3702, RD 3722   |
| RD 3655 | Cover Screw                    |   | RD 3402  |
| RD 3656 | Anti-Reverse Ratchet           |   |  |
| RD 3658 | Anti-Reverse Pawl              |   |  |
| RD 3659 | Anti-Reverse Pawl Spring       |   |  |
| RD 3660 | Anti-Reverse Cam               |   |  |
| RD 3668 | Handle Screw Cap Assembly      |   | RD 3406  |
| RD 3670 | Rotor                          |   | RD 3704, RD 3727   |
| RD 3671 | Ball Assembly                  |   | RD 3707  |
| RD 3672 | Counterbalance Cover           |   | RD 3708, RD 3729   |
| RD 3673 | Oscillating Gear               |   |  |
| RD 3675 | Handle Assembly                |   |  |
| RD 3739 | Main Shaft                     |   |  |
| RD 3740 | Pinion Gear                    |   |  |
| RD 3741 | Anti-Reverse Lever Assembly    |   |  |
| RD 3742 | Drive Gear                     |   |  |
| RD 3743 | Hold Click Spring              |   |  |
| RD 3744 | Drag Click                     |   |  |
| RD 3745 | Oscillating Slider             |   |  |
| RD 3746 | Oscillating Slider Retainer    |   |  |
| RD 3747 | Slider Retainer Screw          |   |  |
| RD 3748 | Drag Shaft                     | BR 0805   |  |
| RD 3749 | Drag Washer "C" (white)        |   |  |
| RD 3750 | Eared Washer "B"               |   |  |
| RD 3751 | Drag Washer "C" (blue)         |   |  |
| RD 3752 | Key Washer "A"                 |   |  |
| RD 3753 | Drag Coil Spring               |   |  |
| RD 3754 | Drag Spring Washer             |   |  |
| RD 3755 | Pressure Screw                 |   |  |
| RD 3756 | Drag Knob Spacer               |   |  |
| RD 3757 | Drag Knob                      |   | RD 3859  |
| RD 3758 | Drag Knob Screw                | BR 0814   | RD 3787  |
| RD 3759 | Side Cover Screw               |   | RD 3404, RD 3666, RD 3704, RD 3724                                     |
| RD 3773 | Body Assembly                  |   |  |