



SOLSTAGE 2500F⁹¹

TO ORDER: USE RD PREFIX
WITH PART NUMBER

PARTS LIST

RD #	DESCRIPTION	RD #	DESCRIPTION	RD #	DESCRIPTION
0041	Drive Gear Washer	2269	Main Shaft	2446	Bushing
0071	Rotor Nut	2271	Quick-Fire II Trigger	2852	Handle Screw Lock
0345	Anti-Reverse Lever Screw	2272	Rotor Side Cover	2856	Bail Spring Guide (A)
0543	Side Cover Screw	2275	Bail Spring Guide (B)	2857	Trigger Cam
0774	Handle Knob Screw	2279	Anti-Reverse Ratchet	2858	Bail Arm
0784	Line Roller Washer	2280	Anti-Reverse Lock Out	2876	Bearing Retainer
0787	Nut Lock Screw	2282	Pinion Gear	2877	Idle Gear (B) Shaft
0803	Handle Knob	2283	Anti-Reverse Pawl Screw	2878	Worm Bearing
0930	Ball Bearing	2284	Anti-Reverse Pawl	2879	Worm Shaft Spacer
0940	Bail Trip Cam Screw	2285	Anti-Reverse Pawl Spring	2880	Idle Gear (A)
0949	Trigger Screw	2286	Anti-Reverse Cam	2882	Idle Gear (B)
1008	Handle Lock Washer	2287	Anti-Reverse Cam Spring	2883	Oscillating Pawl Cover
1038	SiC Ceramic Roller	2292	Anti-Reverse Lever	2884	Oscillating Slider
1302	Line Roller Screw	2293	Drive Gear Bushing	2902	Spool Assembly
1426	Spool Washer	2294	Drive Gear	3068	Bail Trip Lever
1427	Spool Support	2296	Slider Retainer Screw	3069	Worm Shaft
1442	Handle Screw Cap	2298	Spacer	3084	Drag Knob
1504	Bail Spring Cover Screw	2299	Oscillating Slider Bushing	3107	Rotor
1506	Multi Purpose Screw	2300	Oscillating Pawl	3108	Bail Assembly
1509	Bail Spring	2316	Handle Assembly	3109	Bail Spring Cover
1888	Anti-Reverse Lock Out Spring	2355	Drag Washers Retainer	3110	Side Cover
1890	Bushing Washer	2382	Key Washer	3111	Body
1891	Bearing Retainer Screw	2383	Drag Washer		