

PART #	DESCRIPTION	'A' INTERCHANGEABILITY	'B' INTERCHANGEABILITY
RD 0041	Drive Gear Washer	BR 0046, RD 1824, MUX0040, X/ZD1850.	
RD 0630	Ball Bearing	BR 0047.	
RD 1083	Bearing Retainer Screw		
RD 1509	Ball Spring		
RD 1890	Bushing Washer	TGT0224.	
RD 2110	Worm Shaft Retainer Screw	BR 0895.	
RD 2254	Ball Bearing	BR 0805.	
RD 2296	Slider Retainer Screw	BR 0511.	
RD 2298	Spacer	BR 0513.	
RD 2401	Ball Bearing		
RD 2715	Rotor Nut	BR 0489.	
RD 3474	O Ring		
RD 3503	Spool Washer		
RD 3527	Oscillating Slider Bushing		
RD 3534	Drag Knob		
RD 3535	Spool Assembly		
RD 3536	Bearing Bushing		
RD 3537	Main Shaft		
RD 3538	Spool Support		
RD 3539	Rotor		
RD 3540	Ball Spring guide (A)		
RD 3541	Ball Spring Guide (B)		
RD 3542	Ball Spring Cover		
RD 3543	Rotor Protector (A)		
RD 3544	Protector Screw (B)		
RD 3545	Rotor Protector (C)		
RD 3546	Protector Screw (A)		
RD 3547	Rotor Side Shield		
RD 3548	Rotor Protector (B)		
RD 3549	SiC Ceramic Roller		
RD 3550	Ball Assembly		
RD 3551	Ball Trip Lever		
RD 3552	Lock Out Spring Holder		
RD 3553	Anti-Reverse Lock Out Spring		
RD 3554	Anti-Reverse Lock Out		
RD 3555	Bearing Retainer		
RD 3556	Pinion Gear		
RD 3557	Anti-Reverse Pawl Screw		
RD 3558	Anti-Reverse Pawl		
RD 3559	Anti-Reverse Pawl Spring		
RD 3560	Anti-Reverse Cam		
RD 3561	Anti-Reverse Cam Screw		
RD 3562	Anti-Reverse Cam Spring		
RD 3563	Worm Bearing		
RD 3564	Idle Gear Spacer		
RD 3565	Idle Gear		
RD 3566	Worm Shaft		
RD 3567	Bushing		
RD 3568	Rear Shield		
RD 3569	Rear Protector		
RD 3570	Drive Gear		
RD 3571	Trip Cam Screw		
RD 3572	Trip Cam Retainer		
RD 3573	Trip Cam Spring		
RD 3574	Ball Trip Cam		
RD 3575	Oscillating Pawl Cover		
RD 3576	Oscillating Pawl		
RD 3577	Oscillating Slider		
RD 3578	Oscillating Guide		
RD 3579	Worm Shaft Retainer Washer		
RD 3580	Worm Shaft Retainer		
RD 3581	Worm Shaft Retainer Spacer		
RD 3582	Anti-Reverse Lever		
RD 3583	Slide Cover Screw		
RD 3584	Body Assembly		
RD 3585	Handle Screw Cap		
RD 3586	Double Paddle Handle Assembly		