


SYNCOPE

2000FB 01

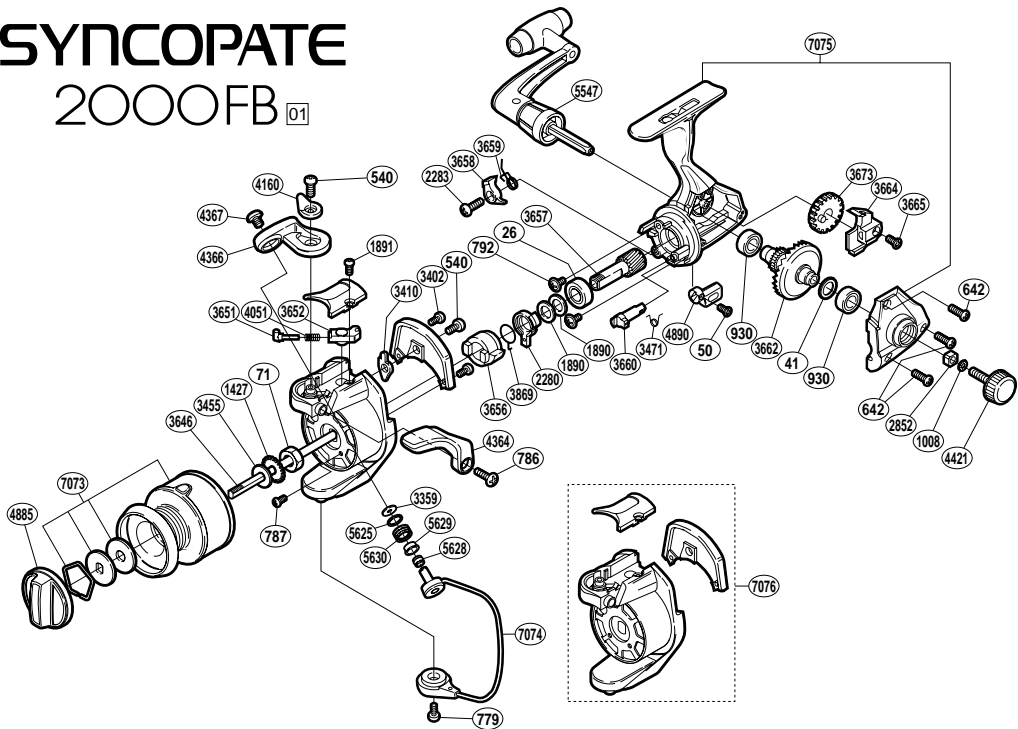

RD No.	PARTS NAMES	RD No.	PARTS NAMES	RD No.	PARTS NAMES
0026	Ball Bearing	3359	Line Roller Washer	4051	Bail Spring
0041	Drive Gear Washer	3402	Cover Screw	4160	Trigger Cam
0050	Anti-Reverse Lever Screw	3410	Bail Trip Lever	4364	Quick-Fire II Trigger
0071	Rotor Nut	3455	Spool Washer	4366	Bail Arm
0540	Multi-Purpose Screw	3471	Anti-Reverse Cam Spring	4367	Line Roller Screw
0642	Side Cover Screw	3646	Main Shaft	4421	Handle Screw Cap
0779	Bail Hold Support Screw	3651	Bail Spring Guide (A)	4885	Drag Knob
0786	Trigger Screw	3652	Bail Spring Guide (B)	4890	Anti-Reverse Lever
0787	Nut Lock Screw	3656	Anti-Reverse Ratchet	5547	Handle Assembly
0792	Bearing Retainer Screw	3657	Pinion Gear	5625	Line Roller Spacer
0930	Ball Bearing	3658	Anti-Reverse Pawl	5628	Line Roller Collar
1008	Handle Lock Washer	3659	Anti-Reverse Pawl Spring	5629	Line Roller Bushing
1427	Spool Support	3660	Anti-Reverse Cam	5630	Line Roller
1890	Bushing Washer	3662	Drive Gear	7073	Spool Assembly
1891	Bail Spring Cover Screw	3664	Oscillating Slider	7074	Bail Assembly
2280	Anti-Reverse Lock Out	3665	Slider Retainer Screw	7075	Body Assembly
2283	Anti-Reverse Pawl Screw	3673	Oscillating Gear	7076	Rotor Assembly
2852	Handle Screw Lock	3869	Anti-Reverse Lock Out Spring		