

**TX110Q 91**TO ORDER: USE RD PREFIX
WITH PART NUMBER**PARTS LIST**

RD #	DESCRIPTION	RD #	DESCRIPTION	RD #	DESCRIPTION
0013	Lever Spring	0562	Drag Programmer Screw	1005	Drive Gear
0018	Line Roller	0647	Multi Purpose Screw	1008	Handle Lock Washer
0022	Bail Trip Lever	0771	Spool Assembly	1021	Handle Assembly
0023	Trip Lever Spacer	0773	Handle Knob	1023	Handle Screw Cap
0026	Ball Bearing	0774	Handle Knob Screw	1302	Line Roller Screw
0028	Anti-Reverse Ratchet	0776	Rotor	1351	Main Shaft
0037	Oscillating Arm	0780	Bail Arm	1353	Side Cover
0039	"C" Lock	0781	Bail Spring	1354	Drag Click
0040	Oscillating Block	0784	Line Roller Washer	1355	Drag Washer "C1"
0041	Drive Gear Washer	0787	Nut Lock Screw	1356	Eared Washer "Br"
0064	Click Gear	0790	Anti-Reverse Switch	1357	Drag Shaft
0071	Rotor Nut	0791	Pinion Gear	1358	Lever Quadrant
0538	Anti-Reverse Pawl	0792	Bearing Retainer Screw	1359	Lever Click Gear
0539	Anti-Reverse Pawl Spring	0795	Bushing (B)	1360	Fightin' Pressure Screw
0540	Anti-Reverse Pawl Screw	0851	Quick-Fire II Trigger	1362	Drag Programmer
0543	Side Cover Screw	0930	Ball Bearing	1963	Anti-Reverse Lock Out
0544	Drag Washer "C2" (white)	0940	Bail Trip Cam Screw	1964	Anti-Reverse Lock Out Spring
0549	Eared Washer "B"	0942	Bail Assembly	1965	Pinion Spacer
0551	"O" Ring	0943	Bail Spring Cover	1974	Drag Coil Spring
0552	Pressure Screw	0944	Bail Trip Cover	1975	Fightin' Drag II Lever
0553	Hold Click Spring	0948	Bail Trip Cover Screw	2852	Handle Screw Lock
0555A	Fightin' Pressure Screw Washer	0949	Trigger Screw	2853	Body