



TO ORDER: USE BNT PREFIX  
WITH PART NUMBER

## PARTS LIST

BNT #	DESCRIPTION	BNT #	DESCRIPTION	BNT #	DESCRIPTION
0015	Drag Spring Washer	0804	Spool Tension Spring	0832	Level Wind Protector
0016	Friction Washer (C)	0805	Spool Shaft Bushing (A)	0834	Level Wind Guard
0042	Line Guide Pawl	0807	Drive Shaft Bearing	0835	Spool Shaft Bushing (B)
0133	Worm Shaft Retainer	0808	Friction Washer (B)	0837	Dial Case
0184	Magnet Retainer Lock	0809	Key Washer (A)	0838	Magnetic Control Dial
0291	Side Plate Screw	0810	Drag Washer (A)	0840	Left Side Plate Screw
0425	Clutchbutton Lock	0812	Drag Washer (B)	0841	Handle Hut
0604	Yoke Spring	0813	Key Washer (B)	0842	Star Drag
0612	Anti-Reverse Pawl Pin	0814	Anti-Reverse Ratchet	0844	Drive Gear
0660	Spring Spacer	0816	Drive Shaft Washer	0845	Drive Shaft
0661	Magnet Retainer Spring	0817	Multi Purpose Screw	0846	Pinion Gear
0664	Spacer (B)	0818	Drive Shaft Retainer	0847	Retractor Spring
0706	Magnet Retainer	0819	Drive Shaft Bushing	0848	Clutch Button
0766	Dial Friction Washer	0821	Yoke	0849	Worm Shaft
0795	Handle Nut Plate Screw	0822	Retractor Spring Pin	0851	Spool
0796	Handle Nut Plate	0824	Yoke Plate Washer (B)	0853	Handle Assembly
0799	Friction Washer	0825	Yoke Plate Washer (A)	0877	Line Guide
0801	Cast Control Cap	0828	Worm Bearing	0880	Spool Shaft Bushing (C)
0802	Spool Tension Spacer (B)	0829	Anti-Reverse Pawl	1092	Pawl Cap
0803	Spool Tension Spacer (A)	0830	Spacer (Optional)		

Prices and specifications subject to change without notice.

1/1990