



TO ORDER:
This reel belongs to the "Bantam" series.
Please order parts using the abbreviation
"BNT" and the part number.

EXPLODED PARTS VIEW

BANTAM® 100 EX & 100 EX SG

PARTS LIST

PART #	DESCRIPTION
1.	Handle Nut Lock Screw
2.	Handle Nut
4.	Drive Shaft Retainer Screw
6.	Friction Washer
7A.	Drag Tri-Star
8.	Cast Control Cap
9.	Cast Control Spacer
10.	Cast Control Bushing
11.	Side Plate Screw
13.	Drive Shaft Bearing
14.	Drag Spring Washer
15.	"D" Washer
16.	Drag Spacer
17.	Pressure Plate
18.	Drag Washer
19.	Drive Gear
20.	Base Drag Washer
21.	Anti Reverse Ratchet

PART #	DESCRIPTION
22.	Drive Shaft
23.	Pinion Gear
24.	Pinion Yoke Spring
25.	Pinion Yoke
26.	Drive Shaft Shim
27.	Retractor #1
28.	Anti Reverse Dog
29.	Retractor #2
31.	Spool Shaft Bearing
32.	Bearing Lock
34S.	Centrifugal Brake Weights (Small)
34L.	Centrifugal Brake Weights (Large)
35.	Left Bearing Spacer
36.	Stabilizer Bar Screw (Right)
39.	Level Wind Bearing (Right)
41.	Line Guide
42.	Level Wind Pawl
43.	Pawl Cap

PART #	DESCRIPTION
45.	Level Wind Bearing (Left)
46.	Level Wind Retainer Screw (Left Hand Thread)
48.	Left Side Plate Screw
49.	Left Stabilizer Bar Screw
50.	Handle Nut Lock Plate
51.	Handle
52.	Right Side Plate
53.	Set Plate
54.	Spool
55.	Frame Assembly
56.	Level Wind Gear
57.	Level Wind Guard
58.	Line Guide Stabilizer Bar
59.	Left Side Plate
60.	Line Guide Pawl Spacer*
156.	Right Side Plate (SG)
157.	Handle (SG)