
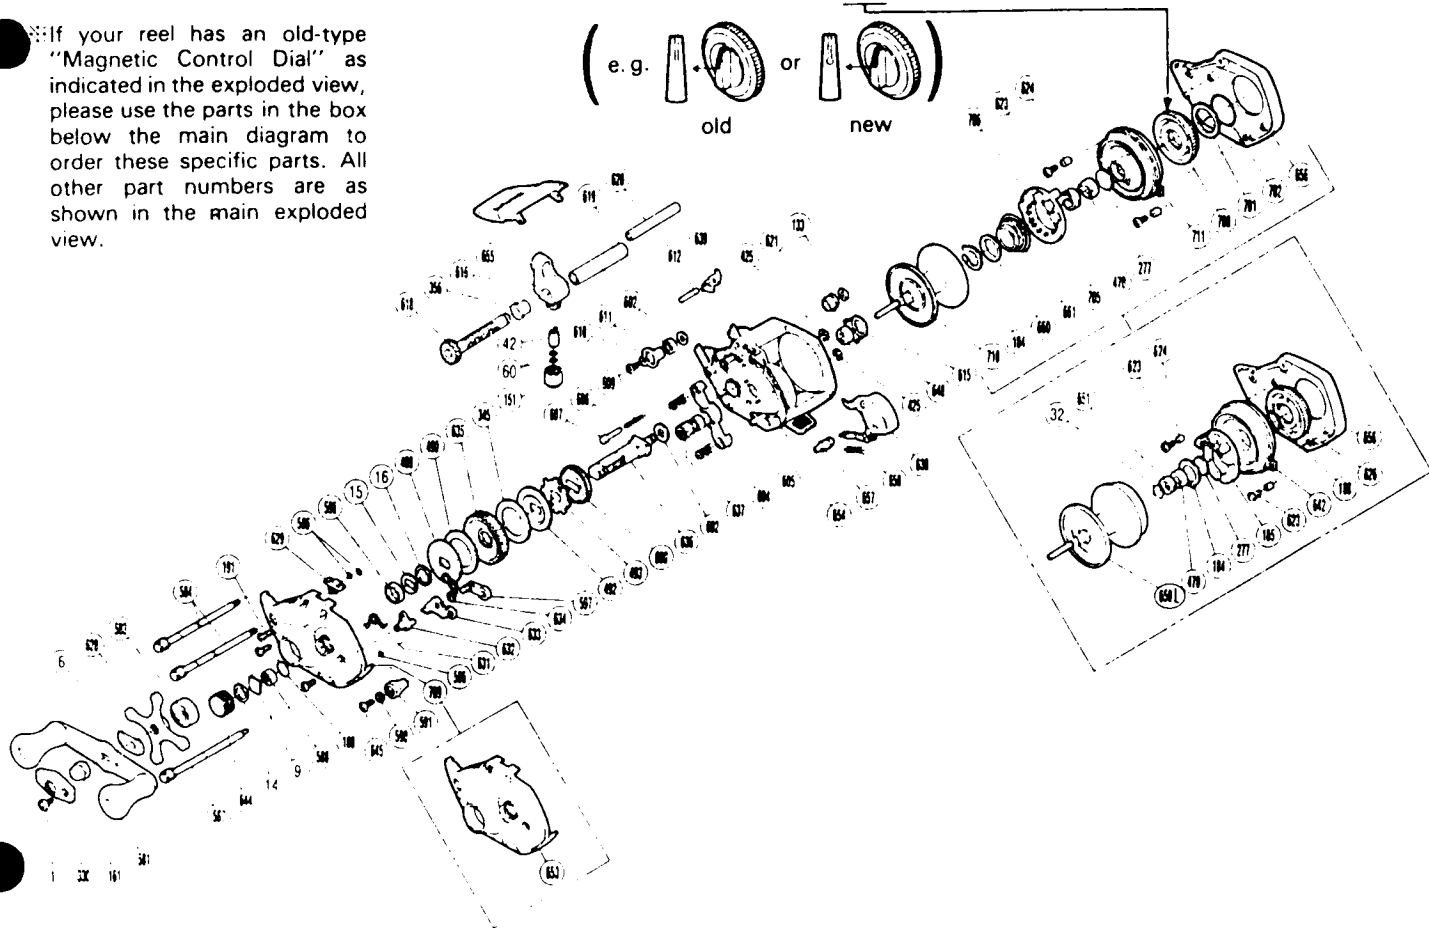


Bantam *Black* Magnum 101

1988 REPAIR MANUAL

⚠ Please check the head of the "Magnetic Control Dial" here to see whether you have an old or new-type reel.

⚠ If your reel has an old-type "Magnetic Control Dial" as indicated in the exploded view, please use the parts in the box below the main diagram to order these specific parts. All other part numbers are as shown in the main exploded view.

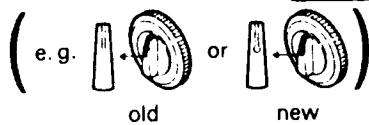

BNT No.	PARTS NAMES	BNT No.	PARTS NAMES	BNT No.	PARTS NAMES
0001	Handle Nut Plate Screw	0590	Lock Washer	0637	Pinion Gear
0006	Friction Washer "A"	0591	Flipping Lever	0638	Clutch Button
0009	Cast Control Spacer	0597	Retractor Spring Guide	0639	Anti-Reverse Pawl
0014	Friction Washer "B"	0598	Bushing	0644	Cast Control Cap
0015	Drag Spring Washer	0600	Idle Gear	0645	Flipping Lever Screw
0016	Friction Washer "C"	0602	Drive Shaft Washer "C"	0648	Spool Shaft Bushing
0042	Line Guide Pawl	0604	Yoke Spring	0654	One-Piece Frame
0060	Spacer (optional)	0605	Yoke	0655	Thumb Rest
0133	Worm Shaft Retainer	0607	Switch Spring Pin	0656	Right Side Plate
0151	Pawl Cap	0608	Switch Spring	0657	Clutch Button Guide Pin
0161	Handle Nut	0609	Drive Shaft Retainer Screw	0658	Flipping Retractor Spring
0184	Magnet Retainer Lock	0610	Drive Shaft Retainer	0660	Spring Spacer (new)
0188	O Ring	0611	Drive Shaft Bushing	0661	Magnet Retainer Spring (new)
0191	Left Side Plate Screw	0612	Anti-Reverse Pawl Pin	0701	Thrust Washer Spacer (optional) (new)
0277	Bushing Spacer "B"	0615	Bushing Retainer	0702	Dial O Ring (new)
0330	Handle Nut Plate	0616	Line Guide	0705	Bushing Retainer (new)
0345	Drive Shaft Washer "B"	0618	Worm Shaft	0706	Magnet Retainer (new)
0356	Worm Bearing "A"	0619	Lever Wind Guard	0708	Magnetic Control Dial (new)
0425	Clutch Button Lock	0620	Stabilizer Bar	0709	Left Side Plate (new)
0458	Bushing "C"	0621	Worm Bearing "B"	0710	Spool (new)
0489	Key Washer "A"	0623	Dial Case Screw	0711	Dial Case (new)
0490	Drag Washer	0624	Screw Support		
0492	Key Washer "B"	0628	Star Drag		
0493	Anti-Reverse Ratchet	0629	Anti-Reverse Switch	0032	Bushing Retainer
0581	Handle Assembly	0631	Cam Spring	0185	Magnet Retainer
0583	Drive Shaft Bearing	0632	Flipping Cam	0626	Magnetic Control Dial
0584	Side Plate Bolt "C"	0633	Joint Plate	0642	Dial Case
0586	Bolt Retainer	0634	Retractor Spring	0650L	Spool
0587	Side Plate Bolt "A"	0635	Drive Gear	0651	Bushing Spacer
0588	Spool Shaft Bushing	0636	Drive Shaft	0653	Left Side Plate