



TO ORDER: USE BNT PREFIX
WITH PART NUMBER

PARTS LIST

BNT #	DESCRIPTION	BNT #	DESCRIPTION	BNT #	DESCRIPTION
0015	Drag Spring Washer	0830	Spacer (optional)	1140	Clutch Plate
0016	Friction Washer (C)	0838	Magnetic Control Dial	1141	Retractor Spring
0031	Drive Shaft Bearing (A)	1010	Spool Tension Spring	1152	Worm Shaft
0042	Line Guide Pawl	1092	Pawl Cap	1153	Stabilizer Bar
0133	Worm Shaft Retainer	1103	Friction Washer (A)	1155	Thumb Rest Support
0194	Ball Bearing	1106	Star Drag Spring	1156	Level Wind Guard
0291	Right Side Plate Screw	1107	Star Drag Nut	1159	Spool Assembly
0425	Drive Shaft Lock	1108	Bearing Holder	1160	Handle Nut Cover
0489	Key Washer (A)	1112	Spool Shaft Bushing	1165	Cast Control Cap
0490	Drag Washer (B)	1116	Cam Spring	1166	Flipping Lever
0586	Bolt Retainer	1117	Flipping Cam	1174	Side Plate Bolt (A)
0589	Flipping Lever Screw	1118	Drive Gear	1175	Side Plate Bolt (B)
0590	Lock Washer	1119	Drag Washer (A)	1178	Quick-Fire II Clutch Bar
0609	Clutch Plate Retainer Screw	1123	Idle Gear	1179	Handle Assembly
0612	Anti-Reverse Pawl Pin	1124	Drive Shaft	1180	Star Drag
0661	Magnet Retainer Spring	1125	Drive Shaft Retainer	1182	Anti-Reverse Switch
0664	Spacer (B)	1127	Worm Bearing	1183	Anti-Reverse Ratchet
0766	Dial Friction Washer	1130	Line Guide	1184	Anti-Reverse Pawl
0780	Magnet Retainer Spring	1132	Pinion Gear	1187	Dial Case
0795	Handle Nut Cover Screw	1133	Yoke Spring	1188	Left Side Plate
0797	Handle Nut	1134	Yoke	1189	Right Side Plate
0802	Spool Tension Spacer (B)	1135	Yoke Spacer	1190	Thumb Rest
0803	Spool Tension Spacer (A)	1136	Clutch Cam	1191	One-Piece Frame
0807	Drive Shaft Bearing (B)	1137	Clutch Pawl	1200	Star Drag Spacer
0808	Friction Washer (B)	1138	Clutch Pawl Spring	1201	Retractor Spring Collar
0816	Drive Shaft Washer	1139	Joint Plate	1202	Magnet Retainer
0817	Multi Purpose Screw				

Prices and specifications subject to change without notice