



TO ORDER: USE BNT PREFIX
WITH PART NUMBER

PARTS LIST

BNT #	DESCRIPTION	BNT #	DESCRIPTION	BNT #	DESCRIPTION
0015	Drag Spring Washer	0834	Level Wind Guard	1139	Joint Plate
0016	Friction Washer (C)	0838	Magnetic Control Dial	1140	Clutch Plate
0042	Line Guide Pawl	0880	Spool Shaft Bushing (B)	1141	Retractor Spring
0133	Worm Shaft Retainer	1010	Spool Tension Spring	1143	Thumb Rest Support
0291	Right Side Plate Screw	1092	Pawl Cap	1146	Spool Assembly
0425	Drive Shaft Lock	1103	Friction Washer (A)	1160	Handle Nut Cover
0489	Key Washer (A)	1106	Star Drag Spring	1163	Side Plate Bolt (A)
0490	Drag Washer (B)	1107	Star Drag Nut	1164	Side Plate Bolt (B)
0586	Bolt Retainer	1108	Bearing Holder	1165	Cast Control Cap
0589	Flipping Lever Screw	1112	Spool Shaft Bushing (A)	1168	Drive Gear
0590	Lock Washer	1114	Flipping Lever	1169	Pinion Gear
0609	Clutch Plate Retainer Screw	1116	Cam Spring	1172	Quick Fire II Clutch Bar
0612	Anti-Reverse Pawl Pin	1117	Flipping Cam	1179	Handle Assembly
0661	Magnet Retainer Spring	1119	Drag Washer (A)	1180	Star Drag
0664	Spacer (B)	1123	Idle Gear	1183	Anti-Reverse Ratchet
0786	Dial Friction Washer	1124	Drive Shaft	1184	Anti-Reverse Pawl
0780	Magnet Retainer Lock	1125	Drive Shaft Retainer	1186	One-Piece Frame
0795	Handle Nut Cover Screw	1126	Worm Shaft	1187	Dial Case
0797	Handle Nut	1127	Worm Bearing	1192	Right Side Plate
0802	Spool Tension Spacer (B)	1131	Stabilizer Bar	1193	Anti-Reverse Switch
0803	Spool Tension Spacer (A)	1133	Yoke Spring	1194	Line Guide
0807	Drive Shaft Bearing (B)	1134	Yoke	1195	Thumb Rest
0808	Friction Washer (B)	1135	Yoke Spacer	1196	Left Side Plate
0816	Drive Shaft Washer	1136	Clutch Cam	1200	Star Drag Spacer
0817	Multi Purpose Screw	1137	Clutch Pawl	1201	Retractor Spring Collar
0819	Drive Shaft Bushing	1138	Clutch Pawl Spring	1202	Magnet Retainer
0830	Spacer (optional)				