



**Bantam
CURADO
200 91**

TO ORDER: USE BNT PREFIX
WITH PART NUMBER

PARTS LIST

BNT #	DESCRIPTION	BNT #	DESCRIPTION	BNT #	DESCRIPTION
0015	Drag Spring Washer	1010	Spool Tension Spring	1139	Joint Plate
0016	Friction Washer (C)	1092	Pawl Cap	1140	Clutch Plate
0042	Line Guide Pawl	1103	Friction Washer (A)	1141	Retractor Spring
0133	Worm Shaft Retainer	1104	Click Gear	1147	Dial Case
0291	Right Side Plate Screw	1106	Star Drag Spring	1148	Magnetic Control Dial
0425	Drive Shaft Lock	1107	Star Drag Nut	1152	Worm Shaft
0489	Key Washer (A)	1108	Bearing Holder	1153	Stabilizer Bar
0490	Drag Washer (B)	1112	Spool Shaft Bushing (A)	1155	Thumb Rest Support
0586	Bolt Retainer	1116	Cam Spring	1156	Level Wind Guard
0589	Flipping Lever Screw	1117	Flipping Cam	1159	Spool Assembly
0590	Lock Washer	1119	Drag Washer (A)	1160	Handle Nut Cover
0609	Clutch Plate Retainer Screw	1120	Anti-Reverse Ratchet	1161	Twin Power Handle Assembly
0612	Anti-Reverse Pawl Pin (A)	1121	Anti-Reverse Pawl Spring (B)	1162	Star Drag
0661	Magnet Retainer Spring	1122	Anti-Reverse Pawl Spring (A)	1165	Cast Control Cap
0664	Spacer (B)	1123	Idle Gear	1166	Flipping Lever
0766	Dial Friction Washer	1124	Drive Shaft	1167	Right Side Plate
0780	Magnet Retainer Lock	1125	Drive Shaft Retainer	1168	Drive Gear
0795	Handle Nut Cover Screw	1127	Worm Bearing	1169	Pinion Gear
0797	Handle Nut	1128	Anti-Reverse Pawl Pin (B)	1173	Left Side Plate
0802	Spool Tension Spacer (B)	1129	Anti-Reverse Pawl	1174	Side Plate Bolt (A)
0803	Spool Tension Spacer (A)	1130	Line Guide	1175	Side Plate Bolt (B)
0807	Drive Shaft Bearing	1133	Yoke Spring	1176	Thumb Rest
0808	Friction Washer (B)	1134	Yoke	1177	One-Piece Frame
0816	Drive Shaft Washer	1135	Yoke Spacer	1178	Quick-Fire II Clutch Bar
0817	Multi Purpose Screw	1136	Clutch Cam	1179	Handle Assembly (spare)
0819	Drive Shaft Bushing	1137	Clutch Pawl	1201	Retractor Spring Collar
0830	Spacer (optional)	1138	Clutch Pawl Spring	1202	Magnet Retainer
0880	Spool Shaft Bushing (B)				