


SHIMANO

1988 REPAIR MANUAL


Shimano American Corporation, One Shimano Dr.
Irvine, CA 92718

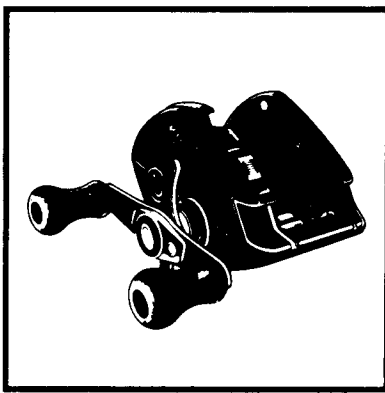

EXPLODED PARTS VIEW

Bantam *Magnumlite*

SpeedMaster 2201WFS

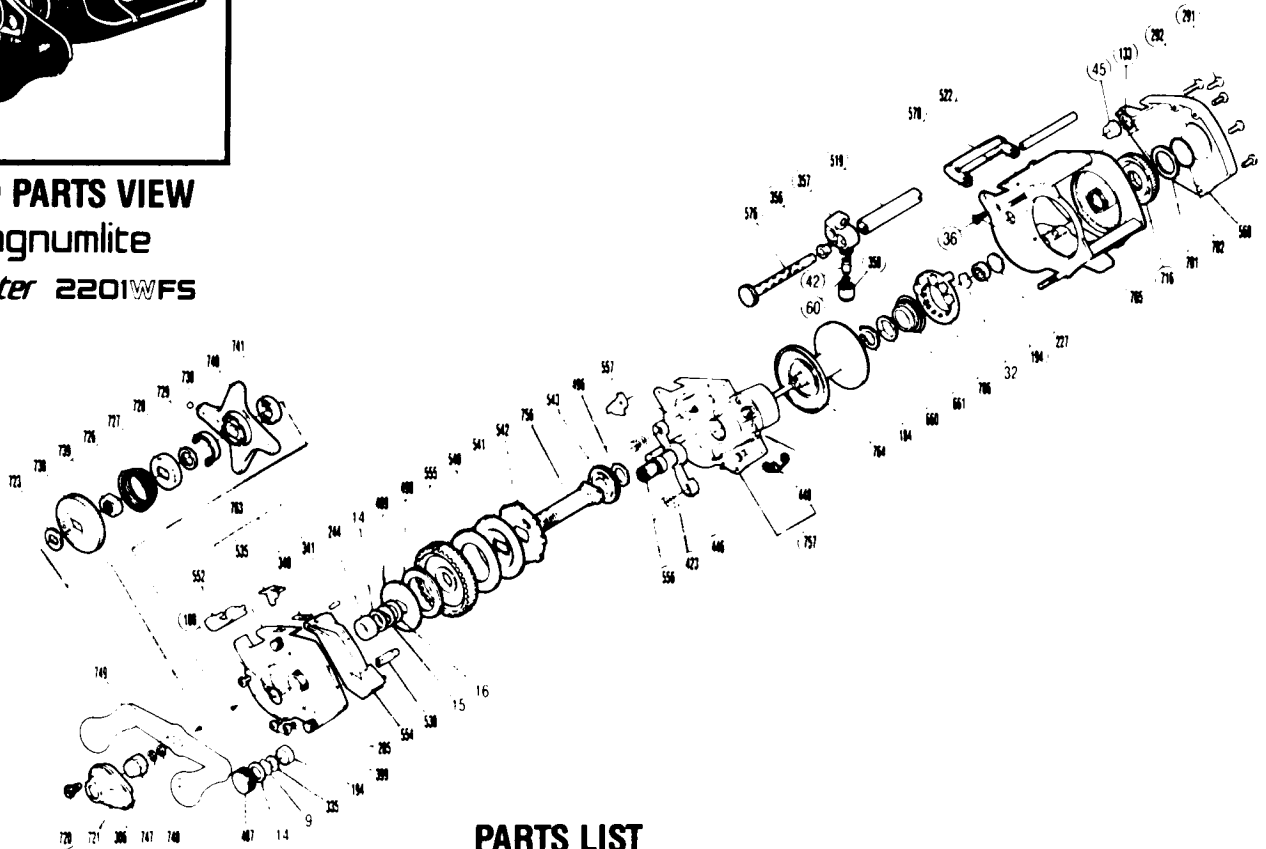

PARTS LIST

PART # DESCRIPTION

BNT 0009 Spacer (A)
BNT 0014 Friction Washer (B)
BNT 0015 Drag Spring Washer
BNT 0016 Friction Washer (C)
BNT 0032 Bearing Retainer
BNT 0036 Stabilizer Bar, Screw (A) (S)
BNT 0042 Line Guide Pawl
BNT 0045 Worm Bearing (B)
BNT 0060 Spacer (Optional)
BNT 0133 Worm Shaft Retainer
BNT 0184 Magnet Retainer Lock
BNT 0188 O Ring
BNT 0194 Ball Bearing
BNT 0244 Bushing (B)
BNT 0277 Spacer (B)
BNT 0285 Set Plate Screw
BNT 0291 Side Plate Screw
BNT 0292 Stabilizer Bar Screw (B)
BNT 0306 Handle Nut
BNT 0335 Bearing Washer (A)
BNT 0340 Switch Spring
BNT 0341 Switch Spring Lock
BNT 0356 Worm Bearing "A"
BNT 0357 Line Guide (Assembly)
BNT 0358 Pawl Cap
BNT 0399 Retractor Guide Screw
(Large Head)

PART # DESCRIPTION

BNT 0423 Yoke Spring
BNT 0446 Yoke
BNT 0448 Retractor Spring
BNT 0487 Cast Control Cap
BNT 0489 Key Washer
BNT 0490 Drag Washer
BNT 0496 Drive Shaft Washer "C"
BNT 0519 Level Wind Guard
BNT 0522 Stabilizer Bar
BNT 0535 Anti-Reverse Switch
BNT 0538 Retractor Guide
BNT 0540 Drive Shaft Washer "B"
BNT 0541 Key Washer "B"
BNT 0542 Anti-Reverse Ratchet
BNT 0543 Idle Gear
BNT 0552 Left Side Platecover
BNT 0554 Clutch Button Attachment
BNT 0555 Drive Gear
BNT 0556 Pinion Gear
BNT 0557 Anti-Reverse Pawl
BNT 0560 Right Side Plate
BNT 0576 Worm Shaft
BNT 0578 Level Wind Protector
BNT 0660 Spring Spacer
BNT 0661 Magnet Retainer Spring
BNT 0701 Thrust Washer Spacer
(Optional)

PART # DESCRIPTION

BNT 0702 Dial O Ring
BNT 0706 Magnet Retainer
BNT 0716 Magnet Control Dial
BNT 0720 Handle Nut Plate Screw
BNT 0721 Handle Nut Plate
BNT 0723 Friction Washer "A"
BNT 0726 Pre-Set Spring
BNT 0727 Strike
BNT 0728 Pre-Set Washer
BNT 0729 Strike Spring
BNT 0730 Strike Ball
BNT 0738 Pre-Set Dial
BNT 0739 Pre-Set Nut
BNT 0740 Star Drag
BNT 0741 Drive Shaft Cam
BNT 0747 Drive Shaft Retainer
BNT 0748 Drive Shaft Washer "A"
BNT 0749 Handle Assembly
BNT 0756 Drive Shaft
BNT 0757 Set Plate Assembly
BNT 0763 Left Side Plate
BNT 0764 Spool
BNT 0765 Frame