


1989 Model

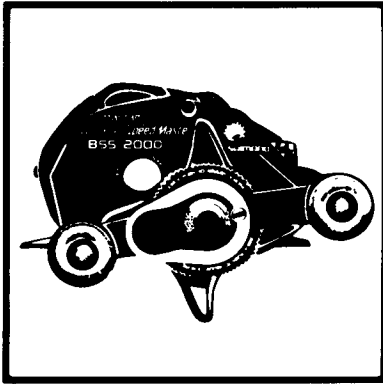

### EXPLODED PARTS VIEW

*SUPER*  
**Bantam SpeedMaster  
2000**

### PARTS LIST

#### PART # DESCRIPTION

BNT 0009	Spacer (A)
BNT 0014	Friction Washer (B)
BNT 0015	Drag Spring Washer
BNT 0016	Friction Washer (C)
BNT 0031	Spool Shaft Bearing
BNT 0032	Bearing Retainer
BNT 0042	Line Guide Pawl
BNT 0060	Spacer (Optional)
BNT 0124	Spool Shaft Bearing
BNT 0133	Worm Shaft Retainer
BNT 0184	Magnet Retainer Lock
BNT 0188	O Ring
BNT 0194	Ball Bearing
BNT 0267	Cast Control Cap
BNT 0277	Spacer (B)
BNT 0291	Side Plate Screw
BNT 0345	Drive Shaft Washer "B"
BNT 0356	Worm Bearing "A"
BNT 0358	Pawl Cap
BNT 0425	Clutchbutton Lock
BNT 0489	Key Washer "A"
BNT 0490	Drag Washer
BNT 0493	Anti-Reverse Ratchet
BNT 0563	Drive Shaft Bearing
BNT 0584	Left Side Plate Bolt "C"
BNT 0585	Anti-Reverse Switch
BNT 0586	Bolt Retainer

#### PART # DESCRIPTION

BNT 0587	Left Side Plate Bolt "A"
BNT 0596	Retractor Spring
BNT 0598	Bushing
BNT 0600	Idle Gear
BNT 0604	Yoke Spring
BNT 0605	Yoke
BNT 0606	Clutch Button
BNT 0607	Switch Spring Pin
BNT 0608	Switch Spring
BNT 0609	Drive Shaft Retainer Screw
BNT 0612	Anti-Reverse Pawl Pin
BNT 0613	Anti-Reverse Pawl
BNT 0615	Bearing Retainer
BNT 0616	Line Guide
BNT 0618	Worm Shaft
BNT 0619	Level Wind Guard
BNT 0620	Stabilizer Bar
BNT 0621	Worm Bearing "B"
BNT 0623	Dial Case Screw
BNT 0624	Screw Support
BNT 0660	Spring Spacer
BNT 0661	Magnet Retainer Spring
BNT 0706	Magnet Retainer
BNT 0707	Dial Case
BNT 0708	Magnet Control Dial
BNT 0720	Handle Nut Plate Screw
BNT 0723	Friction Washer "A"

#### PART # DESCRIPTION

BNT 0724	Pre-Set Dial
BNT 0725	Pre-Set Nut
BNT 0726	Pre-Set Spring
BNT 0727	Strike
BNT 0728	Pre-Set Washer
BNT 0729	Strike Spring
BNT 0730	Strike Ball
BNT 0731	Star Drag
BNT 0732	Drive Shaft Cam
BNT 0766	Dial Friction Washer
BNT 0816	Drive Shaft Washer
BNT 0956	Handle Nut Plate
BNT 0957	Handle Nut
BNT 0958	Handle Assembly
BNT 0959	Right Side Plate
BNT 0960	Drive Gear
BNT 0961	Key Washer "B"
BNT 0962	Drive Shaft
BNT 0963	Drive Shaft Retainer
BNT 0964	Pinion Gear
BNT 0965	One-Piece Frame
BNT 0966	Clutch Button Guide Pin
BNT 0967	Thumb Rest
BNT 0968	Spool
BNT 0969	Left Side Plate
BNT 0994	Retractor Spring Pin