

PART #	DESCRIPTION	"A" INTERCHANGEABILITY	"B" INTERCHANGEABILITY
BNT0011	Multi Purpose Screw	BB 0060,BNT0048,TRN0007	BB 0012,BNT0285
BNT0015	Drag Spring Washer		
BNT0031	Ball Bearing		
BNT0032	Bearing Retainer	BB 0048,BNT0083	
BNT0042	Line Guide Pawl		
BNT0060	Spacer (optional)	TGT0046,TRN0097	
BNT0194	Ball Bearing	BNT0084,TGT0184	
BNT0425	"E" Lock	BB 0037,BNT0234,BR 0326,RD 1673, TGT0042,TLD0137,TRN0091,TT 0096	BR 0117,RD 0476
BNT0664	Spacer (B)		
BNT0686	Idle Gear (B) Retainer	BB 0052,BR 0481,RD 2404,TGT0062, TLD0118,TRN0043,TRN0090,TT 0069	
BNT1133	Yoke/Turnkey Pawl Spring		
BNT1201	Retractor Spring Collar		
BNT1206	Roller Clutch Inner Tube		
BNT1207	Roller Clutch Bearing		
BNT1211	Key Washer		
BNT1212	Drag Washer (C)		
BNT1214	Drag Washer (A)		
BNT1223	Retractor Spring		
BNT1237	Worm Bearing (A) Retainer Scre		
BNT1289	Star Drag Spacer		
BNT1309	Brake Collar (green)		
BNT1317	Brake Collar (red)		
BNT1318	Handle Assembly		
BNT1319	Click Gear		
BNT1320	Star Drag Spring		
BNT1321	Star Drag		
BNT1322	Cast Control Cap Assembly		
BNT1323	Spool Shaft Clip Assembly		
BNT1324	Right Side Plate		
BNT1325	Drive Gear		
BNT1326	Drive Shaft		
BNT1327	Idle Gear		
BNT1328	Drive Shaft Retainer		
BNT1329	Ball Bearing		
BNT1330	Pinion Gear		
BNT1331	Yoke		
BNT1332	Clutch Cam Retainer		
BNT1333	Clutch Cam		
BNT1334	Clutch Plate		
BNT1335	Clutch Pawl		
BNT1336	Clutch Pawl Spring		
BNT1337	Clutch Bar Support Spacer		
BNT1338	Clutch Bar Guide (A)		
BNT1339	Clutch Bar Bolt		
BNT1340	Level Wind Protector		
BNT1341	Line Guide		
BNT1342	Pawl Cap		
BNT1343	Worm Bearing (A) Retainer		
BNT1344	"C" Lock		
BNT1345	One-Piece Frame		
BNT1346	Worm Shaft Assembly		
BNT1347	Level Wind Guide		
BNT1348	Level Wind Guard		
BNT1349	Clutch Bar Guide (B)		
BNT1350	Quick-Fire II Clutch Bar		
BNT1351	Clutch Bar Support		
BNT1352	Right Side Plate Screw		
BNT1353	Spool Assembly		
BNT1354	Ring Retainer Screw		
BNT1355	Brake Case Ring		
BNT1356	Brake Case Retainer Screw		
BNT1357	Brake Case		
BNT1358	Brake Case Spring		
BNT1359	Spring Spacer		
BNT1360	Left Side Plate Spring		
BNT1361	Left Side Plate		
BNT1362	Turnkey Pawl		
BNT1363	Turnkey Dial		