


SHIMANO

TIAGRA

TI-50A

⊙A-RB

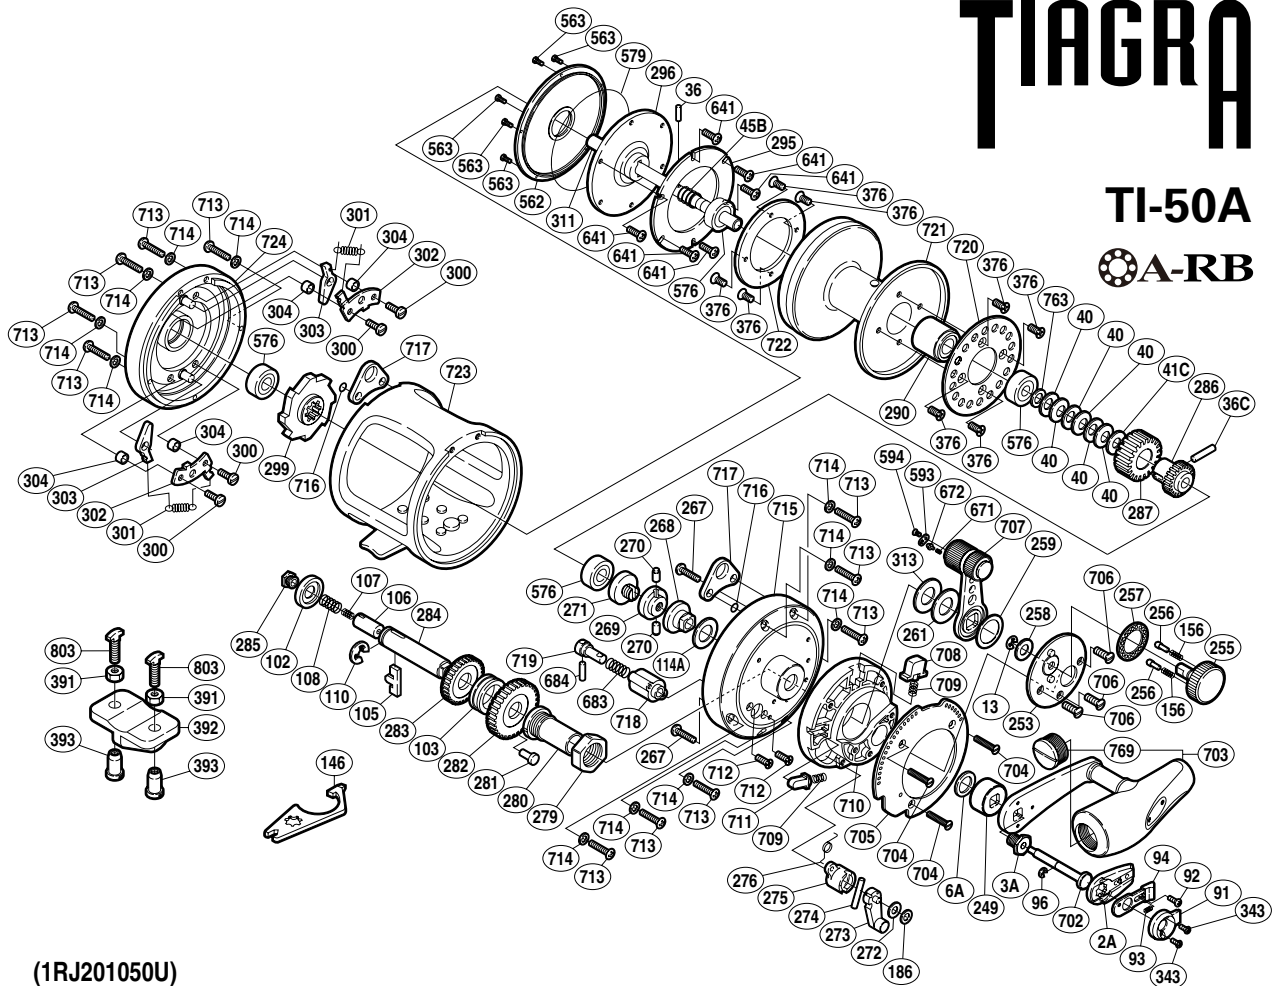

(1RJ201050U)

Part No.	Description	Part No.	Description	Part No.	Description
TT 0002A	Handle Bolt Plate	TT 0271	Pre-Program Screw	TT 0672	Liver Click
TT 0003A	Handle Bolt	TT 0272	Spacer	TT 0683	Click Spring
TT 0006A	Drive Shaft Washer	TT 0273	Strike Alert Lever	TT 0684	Plunger Cross Pin A
TT 0013	C Lock	TT 0274	Plunger Cross Pin B	TT 0702	Push Low Button Shaft
TT 0036	Cross Pin A	TT 0275	Plunger Cross Pin Support	TT 0703	Handle Assembly
TT 0036C	Cross Pin B	TT 0276	Cross Pin Support Spring	TT 0704	Screw
TT 0040	Pre-Load Spring	TT 0279	Holder Nut	TT 0705	Lever Quadrant
TT 0041C	Pre-Load Washer	TT 0280	Drive Shaft Holder	TT 0706	Screw
TT 0045B	Pressure Plate Spring	TT 0281	Lock Pin	TT 0707	Drag Control Lever
TT 0091	Push Button Shield	TT 0282	Drive Gear A	TT 0708	Strike Stop
TT 0092	Screw	TT 0283	Drive Gear B	TT 0709	Pressure Spring
TT 0093	Slide Plate Spring	TT 0284	Drive Shaft	TT 0710	Right Side Plate B
TT 0094	Slide Plate	TT 0285	Drive Shaft Screw	TT 0711	Free Spool Detent
TT 0096	E Lock	TT 0286	Pinion Gear A	TT 0712	Screw
TT 0102	Friction Washer A	TT 0287	Pinion Gear B	TT 0713	Screw
TT 0103	Friction Washer B	TT 0290	Piston Assembly	TT 0714	Washer
TT 0105	Gear Select Cross Bar	TT 0295	Drag Washer	TT 0715	Right Side Plate A
TT 0106	Cross Bar Stop	TT 0296	Pressure Plate	TT 0716	O Ring
TT 0107	Drive Shaft Spring B	TT 0299	Anti-Reverse Ratchet	TT 0717	Harness Lug
TT 0108	Drive Shaft Spring	TT 0300	Screw	TT 0718	Plunger Holder
TT 0110	E Lock	TT 0301	Dog Spring	TT 0719	Alert Plunger
TT 0114A	Washer	TT 0302	Set Plate	TT 0720	Alert Ratchet
TT 0156	Friction Shoe Spring	TT 0303	Dog	TT 0721	Spool
TT 0186	Spacer	TT 0304	Set Plate Support	TT 0722	Drag Plate
TT 0249	Drive Shaft Shield	TT 0311	Main Shaft	TT 0723	One-Piece Frame
TT 0253	Lever Hub Cover	TT 0313	Lever Thrust Ring	TT 0724	Left Side Plate
TT 0255	Pre-Program Dial	TT 0343	Screw	TT 0763	Bearing Thrust Washer
TT 0256	Dial Click Shoe	TT 0376	Screw	TT 0769	Handle Knob Bushing
TT 0257	Dial Click	TT 0562	Cooling Shield		
TT 0258	Washer	TT 0563	Screw		
TT 0259	Lever Thrust Ring	TT 0576	Ball Bearing	TT 0391	Rod Clamp Nut B (accessory)
TT 0261	Lever Thrust Ring	TT 0579	O Ring	TT 0392	Rod Clamp (accessory)
TT 0267	Screw	TT 0593	Lever Click Cover	TT 0393	Rod Clamp Nut A (accessory)
TT 0268	Lever Shaft Body	TT 0594	Screw	TT 0803	Rod Clamp Bolt (accessory)
TT 0269	Pre-Program Key	TT 0641	Screw		
TT 0270	Pre-Program Key Pin	TT 0671	Lever Click Shoe	TT 0146	Wrench (accessory)

(190620)