


TRINIDAD TN 40 02

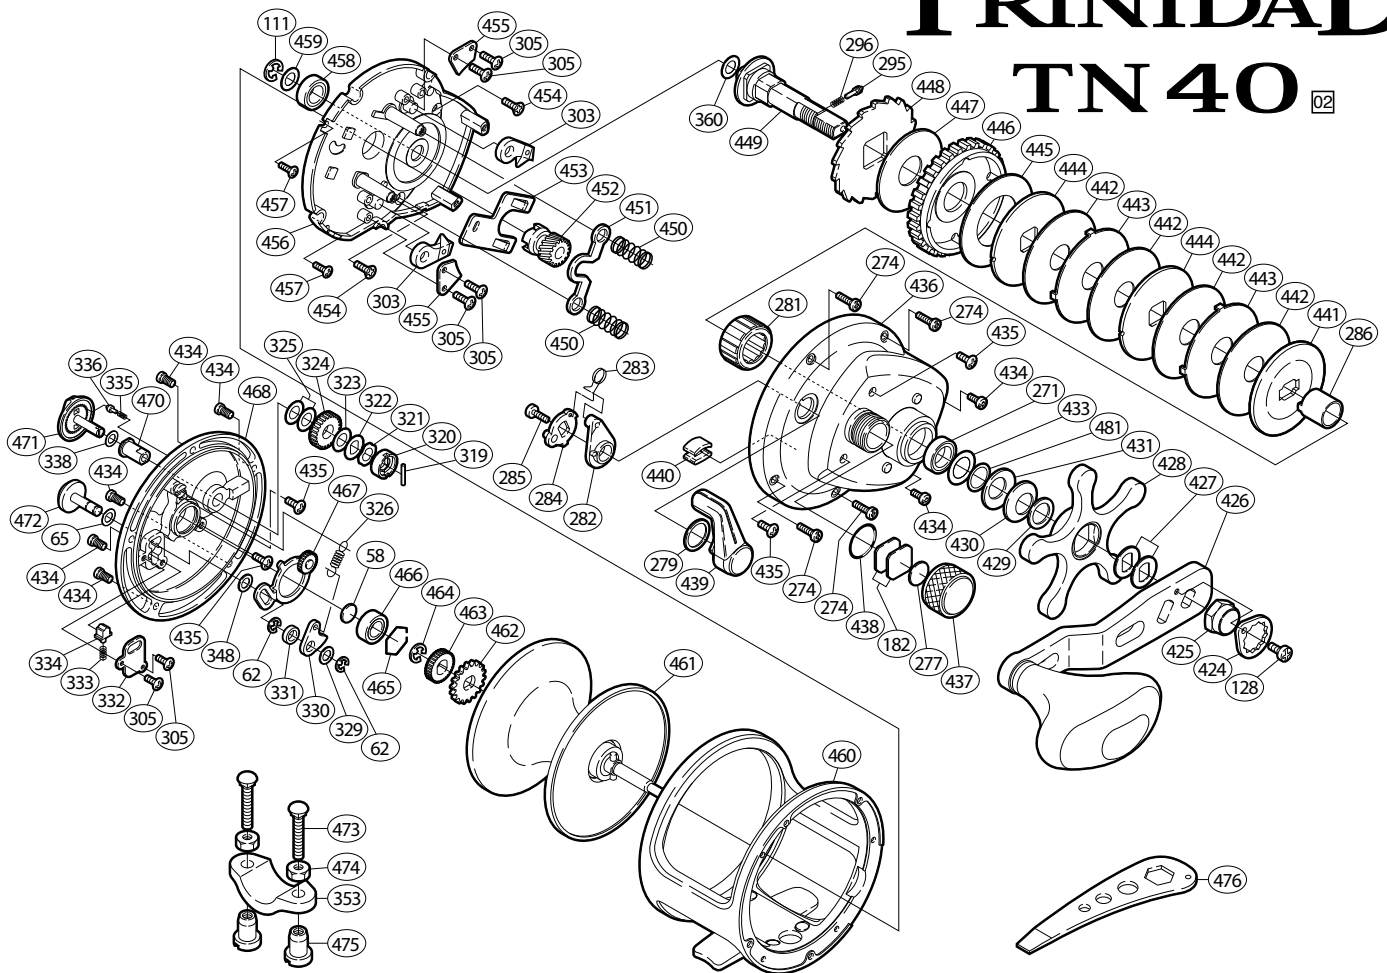

Part No. Description

TGT0058	Spacer "B"
TGT0062	Click Pawl Retainer
TGT0065	Spacer (A)
TGT0111	Drive Shaft Retainer
TGT0128	Handle Nut Plate Screw
TGT0182	Cast Control Spacer (A)
TGT0271	Ball Bearing
TGT0274	Right Side Plate Screw (A)
TGT0277	Cast Control Spacer (B)
TGT0279	Smoother
TGT0281	Roller Clutch Bearing
TGT0282	Eccentric Cam Bushing
TGT0283	Clutch Spring
TGT0284	Clutch Cam
TGT0285	Clutch Lever Screw
TGT0286	Roller Clutch Inner Tube
TGT0295	Click Pin
TGT0296	Click Spring
TGT0303	Anti-Reverse Pawl
TGT0305	Multi-Purpose Screw
TGT0319	"BR" Cam Pin
TGT0320	"BR" Cam
TGT0321	"BR" Friction Washer
TGT0322	"BR" Washer (C)
TGT0323	"BR" Washer (A)
TGT0324	"BR" Gear (C)
TGT0325	"BR" Washer (B)
TGT0326	Click Pawl Spring
TGT0329	Spacer (B)
TGT0330	Click Pawl
TGT0331	Click Pawl Spacer
TGT0332	Click Spring Retainer

Part No. Description

TGT0333	Click Spring
TGT0334	Click Spring Holder
TGT0335	"BR" Click Spring
TGT0336	"BR" Click Pin
TGT0338	"BR" Washer (D)
TGT0348	Spacer (C)
TGT0360	Drive Shaft Washer (B)
TGT0424	Handle Nut Plate
TGT0425	Handle Nut
TGT0426	Handle Assembly
TGT0427	Drive Shaft Shield
TGT0428	Star Drag
TGT0429	Star Drag Washer
TGT0430	Drag Spring Washer (10L)
TGT0431	Drag Spring Washer (10H)
TGT0433	Bearing Seal
TGT0434	Side Plate Screw
TGT0435	Multi-Purpose Screw
TGT0436	Right Side Plate
TGT0437	Cast Control Cap
TGT0438	"O" Ring
TGT0439	Clutch Lever
TGT0440	Line Clip
TGT0441	Key Washer
TGT0442	Drag Washer (D)
TGT0443	Eared Washer (E)
TGT0444	Key Washer (C)
TGT0445	Drag Washer (B)
TGT0446	Drive Gear
TGT0447	Drag Washer (A)
TGT0448	Anti-Reverse Ratchet
TGT0449	Drive Shaft

Part No. Description

TGT0450	Yoke Spring	
TGT0451	Yoke	
TGT0452	Pinion Gear	
TGT0453	Yoke Plate	
TGT0454	Set Plate Screw (B)	
TGT0455	Anti-Reverse Pawl Keeper	
TGT0456	Set Plate	
TGT0457	Set Plate Screw (A)	
TGT0458	Ball Bearing	
TGT0459	Drive Shaft Washer (A)	
TGT0460	One-Piece Frame	
TGT0461	Spool Assembly	
TGT0462	Click Gear	
TGT0463	"BR" Gear (A)	
TGT0464	Click Gear Retainer	
TGT0465	Bearing Retainer	
TGT0466	Ball Bearing	
TGT0467	"BR" Set Plate	
TGT0468	Left Side Plate	
TGT0470	"BR" Bushing	
TGT0471	"BR" Dial	
TGT0472	Click Button	
TGT0481	Bearing Thrust Washer	
TGT0353	Rod Clamp	(accessory)
TGT0473	Rod Clamp Bolt	(accessory)
TGT0474	Rod Clamp Nut (B)	(accessory)
TGT0475	Rod Clamp Nut (A)	(accessory)
TGT0476	Wrench	(accessory)