



UL4 CLASSIC PARTS LIST

Key No.	Part No.	Description	Key No.	Part No.	Description
1	BE-324-1	Front Cover Assy.	15	BJ050-2	Line Release Lever
2	BE310	Spinnerhead Assy.	16	BJ126-2	Line Release Lever Screw
3	XZ034	Spool Clip	17	BJ017	Center Shaft Bearing
4	AJ049	Spinnerhead Spring	18	BJ023-1C	Back Cover
5	BE036	Spool Lip Washer	19	BJ060	Anti-Reverse Pawl
6	BE021	Spool (Empty)	20	BJ318-5	Handle Assembly
	BE321-4H	Spool w/4# H.P. Line	21	BE002	Anti-Reverse Actuator
	BE321-6H	Spool w/6# H.P. Line	22	BE315	Center Shaft Assembly
7	BJ108	Flat Drag Washer	23	BJ012	Crank Gear
8	BJ040	Spool Washer (Metal)	24	BJ014	Anti-Reverse Drag
9	BJ027	Clutch Ring	25	BE061	Anti-Reverse Pawl Spring
10	BJ054-2	Clutch Screw	26	BJ106	Anti-Reverse Washer
11	BJ301-4	Body with Bearing			
12	BJ068	Crank Rod Nut			
13	BJ026	Crank Bearing			
14	BJ032	Drag Wheel			

Should clutch ring (9) drop out while changing spool be sure to put largest flange in head of clutch screw (10) to reassemble.