


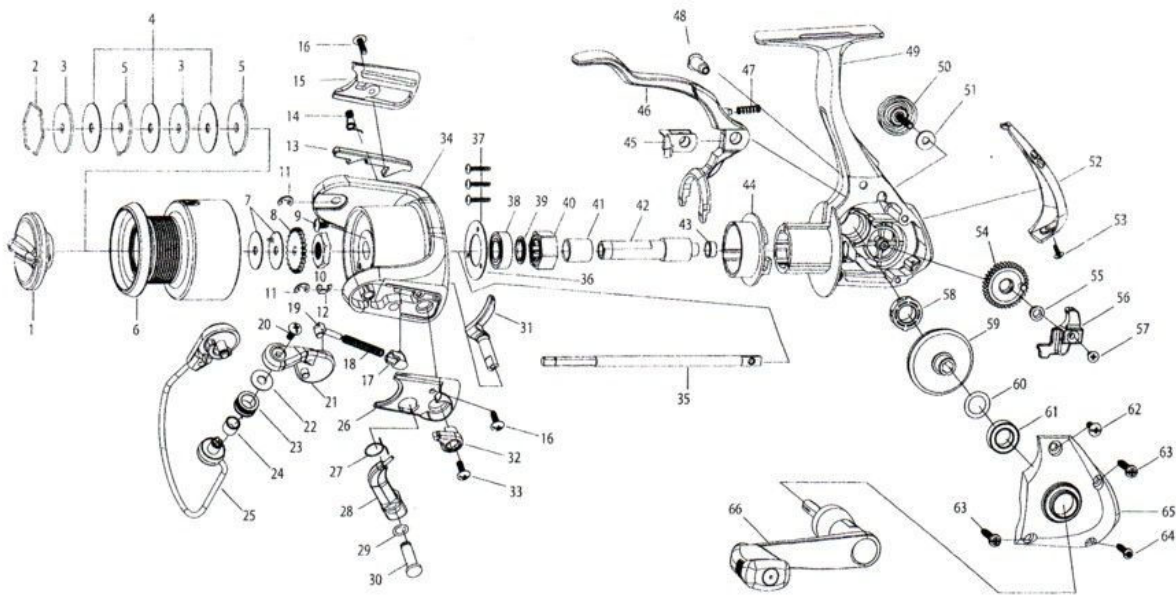

Hypercast HPX20



| Hypercast HPX20 Part List | | | | | |
|---------------------------|-------------------------|----------|-------|---------------------------|----------|
| KEY # | DESCRIPTION | HPX20 | KEY # | DESCRIPTION | HPX20 |
| 1 | Drag Knob Assembly | RQ332-05 | 34 | Rotor | CS009-02 |
| 2 | Drag Retainer | RQ038-01 | 35 | Main Shaft | CS015-01 |
| 3 | Drag Washer "D" | RQ080-01 | 36 | Bearing Plate | NH040-01 |
| 4 | Drag Washer "B" | RQ033-01 | 37 | Bearing Plate Screw | NH041-01 |
| 5 | Drag Washer "A" | RQ081-01 | 38 | Ball Bearing | AQ028-06 |
| 6 | Spool Assembly | CS321-02 | 39 | Bearing Spacer | CS110-01 |
| 7 | Click Gear Washer | RQ030-01 | 40 | Clutch Bearing | CS360-01 |
| 8 | Click Gear | RQ037-01 | 41 | Bearing Sleeve | SQ139-01 |
| 9 | Rotor Nut Lock Screw | GU077-08 | 42 | Pinion Gear | CS011-01 |
| 10 | Rotor Nut | TH006-01 | 43 | Pinion Bushing | CS110-01 |
| 11 | E-Clip | GH034-01 | 44 | Bail Opening Ring | CS121-01 |
| 12 | E-Clip | KQ034-01 | 45 | Kick Boss | CS114-01 |
| 13 | Kick Lever | CS019-01 | 46 | Bail Trip Lever | CS116-01 |
| 14 | Kick Lever Spring | CS049-02 | 47 | Bail Trip Lever Spring | CS117-01 |
| 15 | Kick Lever Cover | CS024-02 | 48 | Bail Trip Lever Shaft | CS115-01 |
| 16 | Cover Screw | GU077-03 | 49 | Body Assembly | CS301-02 |
| 17 | Bail Spring Holder | QL020-01 | 50 | Handle Cap Screw Assembly | RQ073-02 |
| 18 | Bail Spring | CS022-01 | 51 | Handle Cap Washer | TH105-01 |
| 19 | Bail Spring Shaft | KQ031-01 | 52 | Body Rear Cover | CS140-01 |
| 20 | Line Slider Screw | AZ108-01 | 53 | Body Rear Cover Screw | CS062-01 |
| 21 | Arm Lever | CS007-02 | 54 | O/S Gear | TQ053-01 |
| 22 | Line Roller Washer | CS102-01 | 55 | O/S Bushing | RQ158-01 |
| 23 | Line Roller | CS004-01 | 56 | O/S Slider | CS025-01 |
| 24 | Line Roller Bushing | CS016-01 | 57 | Main Shaft Screw | RQ100-01 |
| 25 | Bail Assembly | CS347-02 | 58 | Body Ball Bearing/Bushing | AQ028-03 |
| 26 | Bail Spring Cover | CS087-02 | 59 | Drive Gear | SQ012-01 |
| 27 | Link Arm Lever Spring | CS096-01 | 60 | Gear Adjust Washer | GU105-13 |
| 28 | Link Arm Lever Assembly | CS397-02 | 61 | Body Cover Ball Bearing | AQ028-03 |
| 29 | Link Arm Washer | NH175-01 | 62 | Body Cover Screw | AQ108-01 |
| 30 | Link Arm Lever Pin | CS113-01 | 63 | Body Cover Screw | JU057-03 |
| 31 | Link Shaft Arm | CS151-01 | 64 | Body Cover Screw | GU057-02 |
| 32 | Link Cam | CS154-02 | 65 | Body Cover | CS023-02 |
| 33 | Screw | AQ108-01 | 66 | Handle Assembly | CS318-01 |