

HYPERCAST HC2 PARTS LIST

| KEY PART NO. | KEY PART NO. | DESCRIPTION | DESCRIPTION |
|-----------------|-----------------|-------------------------------|-------------------------------|
| 1 | 37 | UO332-02 Drag Knob Assembly | UO351-02 Bail Plate Assembly |
| 2 | 38 | AO038-01 Spool Ring | UO153 Link Shaft Spring |
| 3 | 39 | AO027 Drag Knob Click Claw | XO151-01 Link Shaft Arm |
| 4 | 40 | AO050 Spool Retainer | XO152-01 Link Shaft Holder |
| 5 | 42 | AO033 Drag Washer "B" | XO040-01 Snap Ring |
| 6 | 43 | AO029 Drag Washer "A" | BO028 Ball Bearing |
| 7 | 44 | AO046 Drag Washer "D" | UO110 Rotor Washer |
| 8 | 45 | UO160-02 Sleeve (Spool) | UO063 Clutch Bearing |
| 9 | 46 | UO321-02 Spool Assembly | KW052-02 Bushing/Bearing |
| 10 | 47 | BO030 Click Gear Washer | XO011-01 Pinion Gear |
| 11 | 48 | BO037 Click Gear | XO200-01 LW Gear |
| 12 | 49 | OL006 Rotor Nut | XO202-01 Bushing W/S Left |
| 13 | 50 | TL065 Rotor Retainer Washer | XO201-01 W/orm Shaft |
| 14 | 51 | XO015-01 Main Shaft | XO204-01 Pawl Holder |
| 15 | 52 | XO009-01 Rotor | UO207-02 Pawl |
| 16 | 53 | XO052-01 Bail Holder Pin | UO208-02 Collar - LW/ Pawl |
| 17 | 54 | W/X4665 E-Clip | UO209 Washer - LW/ Pawl |
| 18 | 55 | UO049 Kick Lever Spring | XO205-01 Retainer - P/Holder |
| 19 | 56 | XO096-01 Link Holder | UO100-02 Screw - Main Shaft |
| 20 | 57 | XO019 Kick Lever | UO206 Retainer - W/orm Shaft |
| 21 | 58 | UO024 Kick Lever Cover | UO203 Bushing W/S Right |
| 22 | 59 | AO085-02 K/L Cover Screw | UO352-02 Bail Trip Lever Assy |
| 23 | 60 | AO108-02 Screw | UO117 Spring - B/T Lever |
| 24 | 61 | XO007-01 Arm Lever | UO116 Lever Shaft |
| 25 | 62 | EQ004 Line Roller (W/Bearing) | XO301-01 Body |
| 26 | 63 | UO347-02 Bail Assembly | XO012-01 Drive Gear |
| 27 | 64 | UO051-01 Arm Lever Pin | AO026-02 Washer - Gear |
| 28 | 65 | UO020 Bail Spring Holder | EQ157 Body Cover Bearing |
| 29 | 66 | UO022 Bail Spring | XO023-01 Body Cover |
| 30 | 67 | UO031 Bail Spring Shaft | AO057-02 Screw - Body Cover |
| 31 | 68 | UO087 Arm Lever Spring Cover | KO057-02 Screw - Body Cover |
| 32 | 69 | UO397 Link Arm Lever | UO318-02 Handle Assembly |
| 33 | 70 | UO057 Screw - Body Cover | UO073 Handle Screw Cap |
| 34 | 71 | UO123 Plate Screw | BO105 Handle Cap Washer |
| 35 | | XO120-01 Retaining Plate | |
| 36 | | UO119 Shaft Spring | |