

HYPERCAST HC3 PARTS LIST

| KEY PART NO. NO. | DESCRIPTION | KEY PART NO. NO. | DESCRIPTION |
|---------------------|-----------------------|---------------------|--------------------------|
| 1 UO332 | Drag Knob Assembly | 37 UQ351 | Bail Plate Assembly |
| 2 AQ038 | Spool Ring | 38 UO153 | Link Shaft Spring |
| 3 AQ027 | Drag Knob Click Claw | 39 UO151 | Link Shaft Arm |
| 4 AQ050 | Spool Retainer | 40 UO152 | Link Shaft Holder |
| 5 AQ033 | Drag Washer "B" | 41 UQ080 | Bearing Plate Screw |
| 6 AQ029 | Drag Washer "A" | 42 UQ040 | Bearing Plate |
| 7 AQ046 | Drag Washer "D" | 43 BO028 | Ball Bearing |
| 8 UO160 | Spool Sleeve | 44 UO110 | Rotor Washer |
| 9 UO321 | Spool Assembly | 45 UO063 | Clutch Bearing |
| 10 BO030 | Spool Adj Washer | 46 KY/052-2 | Bushing Sleeve |
| 11 BO037 | Spool Click Gear | 47 UO011 | Pinion Gear |
| 12 QL006 | Rotor Nut | 48 UQ200 | Level Wind Gear |
| 13 TL065 | Rotor Retainer Washer | 49 UQ202 | Bushing Washer (L) |
| 14 UO015 | Main Shaft | 50 UO201 | Worm Shaft |
| 15 UQ009 | Rotor | 51 XO204 | Pawl Holder |
| 16 UQ052 | Bail Holder Pin | 52 UQ207 | Pawl |
| 17 W/X4665 | E-Clip | 53 UQ208 | Collar - LW/ Pawl |
| 18 UQ049 | Kick Lever Spring | 54 UQ209 | Washer - LW/ Pawl |
| 19 UQ096 | Link Holder | 55 UQ205 | Retainer - Pawl Holder |
| 20 UO019 | Kick Lever | 56 UO100 | Screw - Main Shaft |
| 21 UQ024 | Kick Lever Cover | 57 UQ206 | Retainer - Worm Shaft |
| 22 AQ085-2 | Screw | 58 UQ203 | Bushing Washer (R) |
| 23 AQ108-2 | Screw | 59 UQ352 | Bail Trip Lever Assembly |
| 24 UQ007-1 | Arm Lever | 60 UO117 | Spring - B/T Lever |
| 25 EQ004 | Line Roller | 61 UO116 | Lever Shaft |
| 26 UQ347 | Bail Assembly | 62 UQ301 | Body |
| 27 UQ051 | Arm Lever Pin | 63 UQ012 | Drive Gear |
| 28 UQ020 | Bail Spring Holder | 64 AQ026 | Washer |
| 29 UQ022 | Bail Spring | 65 EO157 | Body Cover Bearing |
| 30 UO031 | Bail Spring Shaft | 66 UO023 | Body Cover |
| 31 UO087 | Bail Spring Cover | 67 AQ057-2 | Screw |
| 32 UQ397 | Top Link Assembly | 68 KO057-2 | Screw |
| 33 UQ057 | Screw | 69 UQ318 | Handle Assembly |
| 34 UO123 | Plate Screw | 70 UQ073 | Handle Screw Cap |
| 35 UO120 | Bail Plate | 71 BO105 | Handle Cap Washer |
| 36 UO119 | Shaft Spring | | |