




# Catalyst - CT20PTi & Kinetic - KT20PTi

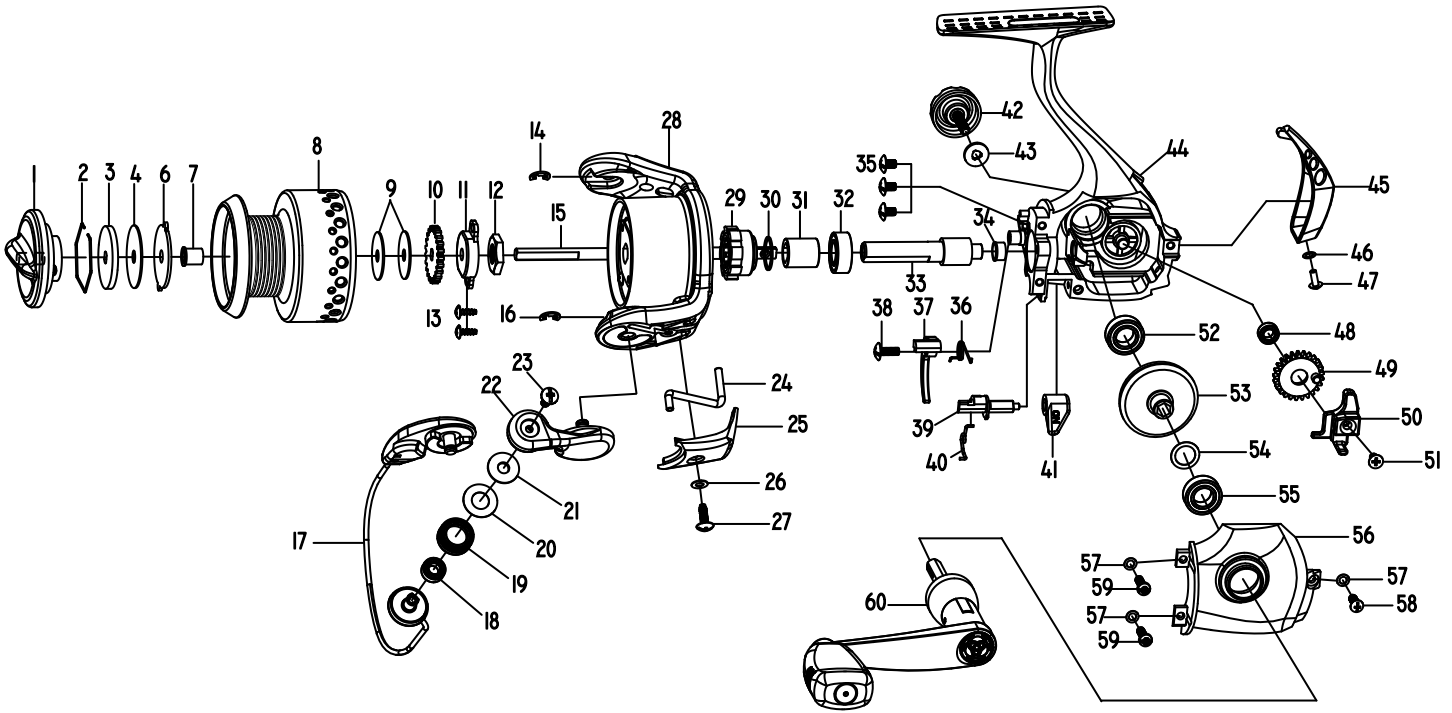

KEY #	DESCRIPTION	KT20PTi	CT20PTi
1	DRAG KNOB ASSEMBLY	RQ332-03	RQ332-01
2	DRAG RETAINER	RQ038-01	RQ038-01
3	DRAG WASHER "D"	SQ080-01	SQ080-01
4	DRAG WASHER "B"	RQ033-01	RQ033-01
5	DRAG WASHER "D"	N/A	N/A
6	DRAG WASHER "A"	RQ081-01	RQ081-01
7	SPOOL SLEEVE	RQ160-01	RQ160-01
8	SPOOL ASSEMBLY	RQ321-51	RQ321-52
9	SPOOL WASHER	RQ030-01	RQ030-01
10	CLICK GEAR	RQ037-01	RQ037-01
11	MAIN SHAFT BUSHING	RQ214-01	RQ214-01
12	ROTOR NUT	SH006-01	SH006-01
13	ROTOR NUT LOCK SCREW	RQ094-01	RQ094-01
14	E-CLIP	GH034-01	GH034-01
15	MAIN SHAFT	RQ015-01	RQ015-01
16	E-CLIP	GH034-01	GH034-01
17	BAIL ASSEMBLY	RQ347-51	RQ347-51
18	LINE ROLLER BEARING	GH202-01	GH202-01
19	LINE ROLLER	CH004-01	CH004-01
20	LINE ROLLER WASHER	DH102-01	DH102-01
21	LINE ROLLER COLLAR	CH102-01	CH102-01
22	ARM LEVER ASSEMBLY	RQ307-03	RQ307-01
23	LINE SLIDER SCREW	AQ108-07	AQ108-07
24	KICK LEVER	RQ019-01	RQ019-01
25	ARM LEVER COVER	RQ087-01	RQ087-01
26	ARM LEVER COVER WASHER	SQ142-01	SQ142-01
27	ARM LEVER COVER SCREW	GU077-15	GU077-15
28	ROTOR ASSEMBLY	RQ309-51	RQ309-52
29	CLUTCH ASSEMBLY	RQ360-01	RQ360-01
30	CLUTCH WASHER	RQ167-01	RQ167-01

KEY #	DESCRIPTION	KT20PTi	CT20PTi
31	CLUTCH SLEEVE	RQ139-01	RQ139-01
32	PINION BALL BEARING	BH028-01	BH028-01
33	PINION GEAR	RQ011-01	RQ011-01
34	PINION BUSHING	RQ141-01	RQ141-01
35	BEARING SCREW	RQ041-01	RQ041-01
36	ANTI REVERSE PAWL SPRING	RQ061-01	RQ061-01
37	ANTI-REVERSE PAWL	RQ063-01	RQ063-01
38	ANTI-REVERSE PAWL SCREW	RQ077-01	RQ077-01
39	ANTI REVERSE CAM	RQ090-01	RQ090-01
40	ANTI REVERSE CAM SPRING	RQ089-01	RQ089-01
41	ANTI REVERSE LEVER	RQ059-01	RQ059-01
42	HANDLE CAP SCREW	RQ073-01	RQ073-01
43	HANDLE SCREW WASHER	TH105-01	TH105-01
44	BODY ASSEMBLY	RQ301-51	RQ301-52
45	BODY REAR COVER	RQ140-51	RQ140-51
46	BODY REAR COVER WASHER	RQ142-01	RQ142-01
47	BODY REAR COVER SCREW	RQ062-01	RQ062-01
48	O/S GEAR BALL BEARING	EH158-01	EH158-01
49	OSCILLATOR GEAR	RQ053-51	RQ053-51
50	OSCILLATOR SLIDER	RQ025-01	RQ025-01
51	MAIN SHAFT SCREW	RQ100-01	RQ100-01
52	GEAR SHAFT BALL BEARING	CH028-01	CH028-01
53	DRIVE GEAR	RQ012-01	RQ012-01
54	ADJUST WASHER	GU105-08	GU105-08
55	GEAR SHAFT BALL BEARING	CH028-01	CH028-01
56	BODY COVER	RQ023-51	RQ023-52
57	BODY COVER SCREW WASHER	RQ142-01	RQ142-01
58	BODY COVER SCREW	SQ057-01	SQ057-01
59	BODY COVER SCREW	RQ057-01	RQ057-01
60	HANDLE ASSEMBLY	RQ318-51	RQ318-52