


DIAGRAM

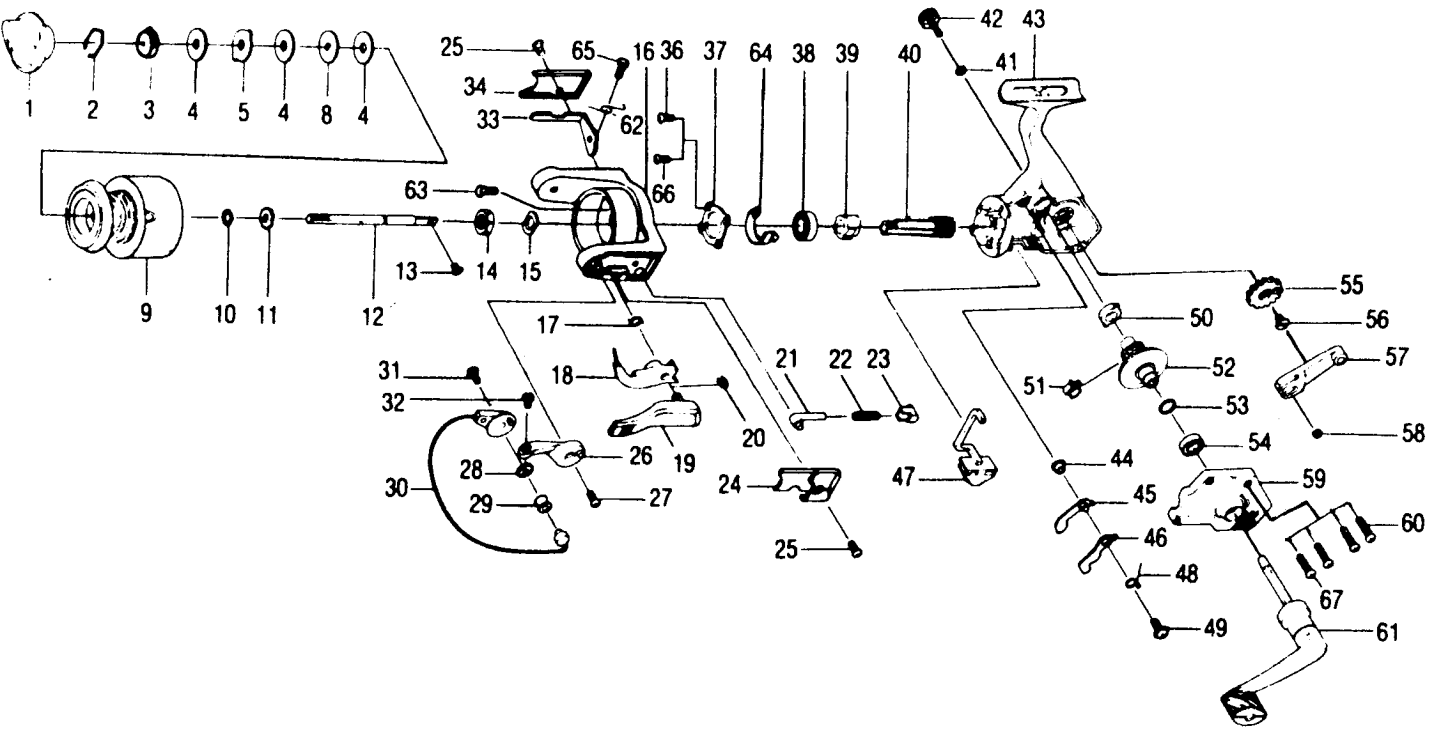

PARTS LIST

Key No.	Description	SE2 Part No.	SE3 Part No.	SE4 Part No.	SE5 Part No.
1	Drag Knob Assy	AO332	AO332	CO332	CO332
2	Drag Retainer	AO038	AO038	CO038	CO038
3	Spool Retainer	AO050	CO050	CO050	CO050
4	Spool W/S A	AO033	AO033	CO033	CO033
5	Spool W/S B	AO029	AO029	CO029	CO029
6	Spool W/S D	AO046	AO046	CO046	CO046
7	Spool Assy	EO321-1	EO321-1	GO321-1	GO321-1
8	Spool A/J W/S	AO030	AO030	CO030	CO030
9	Spool Click Gear	AO037	AO037	CO037	CO037
10	Main Shaft	AO015-1	AO015-1	CO015-1	CO015-1
11	Main Shaft S/C	AO1100	AO1100	UL100	UL100
12	Rotor Nut	NL006	UL006	UL006	UL006
13	Rotor Retainer W/S	NL065	UL065	UL065	UL065
14	Rotor	EO009-1	BO009-1	GO009-1	HO009-1
15	Trip Link Spring	NL096	NL096	PL096	NL096
16	Trip Link	PL097	PL097	PL097	PL097
17	E-Clip	PL115	PL115	PL115	PL115
18	Spring Shaft	NL034	NL034	NL034	NL034
19	Bail Spring	NL031	QL031	QL031	QL031
20	Bail Spring Holder	NL022	QL022	QL022	QL022
21	Spring Holder	PL020	QL020	QL020	QL020
22	Rotor Cover S/C	AO087-1	BO087-1	CO087-1	CO087-1
23	Arm Lever	AO085	AO085	GO085	GO085
24	Arm Lever S/C	AO051	AO051	GO051	GO051
25	Bail Collar	EO017-1	EO017-1	EO017-1	EO017-1
26	Line Roller	EO004-1	EO004-1	EO004-1	EO004-1
27	Bail Assy	EO347-1	BO347-1	GO347-1	HO347-1
28	Bail Holder S/C	AO044	AO044	SL108	SL108
29	Kick Lever	AO019-1	BO019-1	CO019-1	DO019-1
30	Kick Lever Cover	AO024-1	BO024-1	CO024-1	CO024-1
31	Bearing Plate S/C	AO080	AO080	CO080	AO080
32	Bearing Plate	AO040-1	BO040-1	CO040-1	CO040-1
33	BiBearing - Rotor	AO028	BO028	CO028	CO028
34	Ratchet Gear	PL060	BO060	CO060	CO060
35	Prion Gear	AO011-1	BO011-1	CO011-1	CO011-1
36	Handle Cap W/S	AO105	BO105	BO105	BO105
37	Handle S/C Cap	NL073	AL073	QL073	QL073
38	Body	EO001-1	GO001-1	HO001-1	HO001-1
39	Stopper Bushing	NL091	NL091	NL091	NL091
40	Stopper-A	NL064	BO064	QL064	QL064
41	Stopper-B	NL063	BO063	QL063	QL063
42	Stopper Lever	AO059	BO059	CO059	CO059
43	Stopper L/R Spring	AO061	BO061	CO061	CO061
44	Stopper S/C	AO083	AO083	CO083	CO083
45	Body Bushing	AO013-1	AO013-1	AO013-1	AO013-1
46	Sliding Spring	AO086	AO086	CO086	CO086
47	Drive Gear	EO012	BO012-1	GO012	GO012
48	Drive Gear A/J W/S	AO026	AO026	EO157	EO157
49	Body Cover B/B	EO157	EO157	EO157	EO157
50	O/S Gear	AO053	BO053-1	CO053	CO053
51	O/S Gear S/C	AO078	WK078	WK078	WK078
52	O/S Pivot Arm	AO025	BO025	CO025	CO025
53	O/S Pivot Arm W/S	AO056	AO056	GO056	GO056
54	Body Cover	EO023-1	BO023-1	AO057	HO023-1
55	Body Cover S/C	KO057	AO057	AO057	AO057
56	Handle Assy	NL318	AL318	QL318	QL318
57	Kick Lever Spring	AO049-1	BO049-1	RL094	RL094
58	Rotor Nut Lock S/C	AO082-1	BO082-1	CO082-1	CO082-1
59	Kick Lever Guide	AO077	AO077	AO077	AO077
60	Kick Lever S/C	AO080-1	AO080-1	AO080-1	AO080-1
61	Bearing Plate S/C	KO057	KO057	—	—
62	Body Cover S/C	—	—	—	—
63	Body Cover	—	—	—	—
64	Body Cover S/C	—	—	—	—
65	Body Cover S/C	—	—	—	—
66	Body Cover S/C	—	—	—	—
67	Body Cover S/C	—	—	—	—