

KEY NO.	DESCRIPTION	PART NO.		QUANTITY	PRICE	EXTENSION
		OLD	NEW			
21	Bail Arm Lever Screw	19003	BX-38		\$ .20	
22	Bail Arm Lever Spring	28001	HX-42		.15	
23	Bail Arm Lever	15002	HX-43		.20	
24	Rotor Nut	18001	HX-6		.15	
25	Rotor	05001	HX-9-A		2.05	
26	Oilless Bush Holding Screw	20001	FX-25		.10	
27	Oilless Bushing Holder	17002	HX-26		.35	
28	Oilless Bushing	38014	HX-27		.30	
29	Pinion Gear	09002	HX-11		.35	
30	Main Body	03001	HX-1-A		2.05	
31	Side Plate Screw A	20018	HX-73		.10	
32	Side Plate Screw B	20003	BX-72		.10	
33	Side Plate	04001A	HX-24-A		.95	
34	Oscillating Slider	11001	HX-64		.40	
35	Oscillating Slider Pin	23002	HX-66		.15	
36	Oscillating Slider Collar	17001	HX-62		.10	
37	Main Gear Assembly	0208002	HX-8-A		1.15	
38	Master Gear Adjusting Washer	27002	HX-77		.10	
39	Anti-Reverse Claw Screw	19003	BX-48		.20	
40	Anti-Reverse Claw	33001	HX-35		.15	
41	Anti-Reverse Claw Spring	28005	HX-37		.10	
42	Anti-Reverse Lever Cam	14002	HX-36		.20	
43	Spring Washer	27003	BX-55		.10	
44	Anti-Reverse Lever	15001	BX-52		.30	
45	Anti-Reverse Lever Screw	21001	BX-51		.10	
46	Handle Assembly	0207001	HX-18-A		3.60	✓