

Parts List

Key #	Description	Part No.		Key #	Description	Part No.		
		AC500CX	AC400C			AC500PT	AC400C	AC500PT
1	Palm Side Cover Assembly	HV323-01	HV323-02	40	Kick Lever	HV077-01	AC400C	AC500PT
2	Palm Side Cover Locking Spring	QV095-01		41	Release Slider	HV039-01		
3	Palm Side Cover Locking Pin	HV095-01		42	Release Slider Guide Pin	HV102-01		
4	Palm Side Cover Release Button	HV119-01		43	Kick Lever Guide Pin	HV119-01		
5	Centrifugal Dial Spring	HV108-01		44	Thumb Bar Screw	ZW053-01		
6	Centrifugal Dial	HV026-01		45	Crank Shaft Bearing (L)	SW017-01		
7	Spool Cover	HV051-01		46	Crank Shaft Retainer	QW120-01		
8	Spool Cover Screw	QV125-02		47	E-Clip	HV002-01		
9	Spool Shaft Washer	QW032-04		48	Crank Shaft Retainer Screw	QV125-02		
10	Spool Shaft Bearing (Palm)	QV017-01		49	Crank Shaft	HV008-01		
11	Clip Ring	HV080-01		50	O/S Drive Gear	ZW112-01		
12	Spool Assembly	HV321-01	HV321-02	51	Trip Ratchet	QW083-01		
13	Clip Ring	HV080-01		52	Trip Ratchet Washer	QW111-01		
14	Spool Shaft Bearing (Gear)	JK108-01		53	Drive Gear	HV012-01	XV012-01	HV012-01
15	E-Clip	NX092-01		54	Drive Disc	HV059-01		
16	Frame	NX092-01		55	Drive Key Washer	HV045-01		
17	Thumb Bar	HV001-01		56	Link	HV038-01		
18	Thumb Bar	HV009-01		57	One Way Bearing Sleeve	HV052-01		
19	E-Clip	NX092-01		58	Gear Side Cover Assembly	HV324-01	HV324-02	HV324-06
20	Worm Shaft Washer	QW035-03		59	Gear Side Cover Screw	BV123-02	BV123-01	
21	Worm Shaft Bushing (Palm)	HV067-01		60	Drive Click Spring Assembly	ZW114		
22	Worm Shaft	HV072-01		61	Tension Knob O-Ring	QW101-01		
23	Stabilizer Bar	ZW081-01		62	Tension Knob Bearing	SW117-01	N/A	SW117-01
24	Worm Shaft Guide	HV016-01		62	Tension Knob Bushing	N/A	QW117-01	N/A
25	Hood Screw	QV125-02		63	Spool Tension Washer	QW032-04		
26	Hood Assembly	HV327-01	HV327-02	64	Spool Cushion Washer	QW087-01		
27	Line Guide Carrier Assembly	HV347-02	HV347-01	65	Spool Tension Knob	HV033-02	HV033-01	
28	Line Guide Pin	ZW006-01		65	Spool Tension Knob Assy	N/A	N/A	GX333-01
29	Line Guide Carrier Washer	BV035-01		66	Spring "D" Washer	QW046-02		
30	Line Guide Carrier Screw	ZW007-01		67	Star Drive Assembly	HV355-02	HV355-01	HV355-05
31	Worm Shaft Bushing (Gear)	HV068-01		68	Handle Washer	QW054-01		
32	O/S Pinion Gear	HV095-01		69	Handle Assembly	HV318-02	HV318-01	
33	E-Clip	NX090-01		70	Handle Nut	RV003-01		
34	Pinion Yoke	HV025-01		71	Handle Nut Cap	RV094-02	RV094-01	
35	Pinion Yoke Spring	QW040-01		72	Centrifugal Dial Washer	QV111-01		
36	Pinion Gear Assembly	YW311-01	ZW311-01	73	Brake Ring Assembly	HV342-01		
37	Release Slider Spring	HV104-01		74	Brake Ring Slider Spring	QV070-01		
38	Flip Switch	HV087-02	HV087-01	75	Brake Ring Retainer Screw	QV076-01		
39	Kick Lever Spring	QV097-01		76	Spool Tension Collar	QV081-01		