

Parts List

QUANTUM ACCURIST LEFT HAND AC501CX/AC401C/AC501PT PART LIST

Key #	Description	Part No.		Key #	Description	Part No.	
		AC501CX	AC401C			AC501PT	AC401C
1	Palm Side Cover Assembly	BX323-01	BX323-03	40	Kick Lever	BX077-01	AC401C
2	Palm Side Cover Locking Spring	QV098-01		41	Release Slider	BX098-01	
3	Palm Side Cover Locking Pin	BX085-01		42	Release Slider Guide Pin	HV102-01	
4	Palm Side Cover Release Button	BX119-01		43	Kick Lever Guide Pin	HV118-01	
5	Centrifugal Dial Spring	HV108-01		44	Thumb Bar Screw	ZW083-01	
6	Centrifugal Dial	BX028-01		45	Crank Shaft Bearing (L)	SW017-01	
7	Spool Cover	QV051-01		46	Crank Shaft Retainer	QW120-01	
8	Spool Cover Screw	QV125-02		47	E-Clip	HV002-02	
9	Spool Shaft Washer	QW092-04		48	Crank Shaft Retainer Screw	QV125-02	
10	Spool Shaft Bearing (Palm)	QV017-01		49	Crank Shaft	HV008-02	
11	Clio Ring	HV080-01		50	O/S Drive Gear	ZW112-01	
12	Spool Assembly	HV321-03	HV321-02	51	Trio Ratchet	QW083-01	
13	Clio Ring	HV080-01		52	Trio Ratchet Washer	QW111-01	
14	Spool Shaft Bearing (Gear)	JX108-01		53	Drive Gear	HV012-02	XV012-02
15	E-Clip	NX092-01		54	Drive Disc	HV059-01	
16	E-Clip	NX092-01		55	Drive Key Washer	HV045-01	
17	Frame	BX001-01		56	Link	HV038-01	
18	Thumb Bar	BX008-01		57	One Way Bearing Sleeve	HV052-01	
19	E-Clip	NX092-01		58	Gear Side Cover Assembly	BX324-02	BX324-03
20	Worm Shaft Washer	QW035-03		59	Gear Side Cover Screw	BV123-01	
21	Worm Shaft Bushing (Palm)	HV067-01		60	Drive Check Spring Assembly	ZW4114	
22	Worm Shaft	HV072-01		61	Tension Knob O-Ring	QW101-01	
23	Stabilizer Bar	ZW051-01		62	Tension Knob Bearing	SW117-01	
24	Worm Shaft Guide	HV016-01		63	Tension Knob Bushing	N/A	QW117-01
25	Hood Screw	QV125-02		64	Spool Tension Washer	QW032-04	
26	Hood Assembly	BX327-01	BX327-03	65	Spool Cushion Washer	QW082-01	
27	Line Guide Carrier Assembly	HV347-02	HV347-01	66	Spool Tension Knob	HV033-02	
28	Line Guide Pawl	ZW006-01		67	Spool Tension Knob Assembly	N/A	CX333-01
29	Line Guide Carrier Washer	BV035-01		68	Star Drive Assembly	QW046-02	
30	Line Guide Carrier Screw	ZW007-02		69	Handle Washer	HV355-04	HV355-06
31	Worm Shaft Bushing (Gear)	HV085-01		70	Handle Nut	QW064-01	
32	O/S Pinion Gear	NX090-01		71	Handle Nut Cap	HV318-02	
33	E-Clip	BX025-01		72	Handle Assembly	RV003-02	
34	Pinion Yoke	QW040-01		73	Centrifugal Dial Washer	RV034-02	
35	Pinion Yoke Spring	QW040-01		74	Brake Ring Slider	QV111-01	
36	Pinion Gear Assembly	VM311-02	ZW311-02	75	Brake Ring Retainer Screw	BX342-01	
37	Release Slider Spring	BX104-01		76	Spool Tension Screw	QV070-01	
38	Flamin Switch	BX087-02		77	Spool Tension Collar	QV076-01	
39	Kick Lever Spring	QV087-01		78		QW081-01	