


Energy PT Parts Diagram - E770PT / E760PT / E750PT

ORDERING PARTS

Refer to the parts list and diagram for your model. Locate the part you need and identify the key number for the part you wish to order for your model. Always state the model number, part number, part description and quantity on your orders. Parts may be ordered direct from the Factory Service Department (1-800-588-9030), Authorized Warranty / Service Centers, and online at www.tackleservice.com.

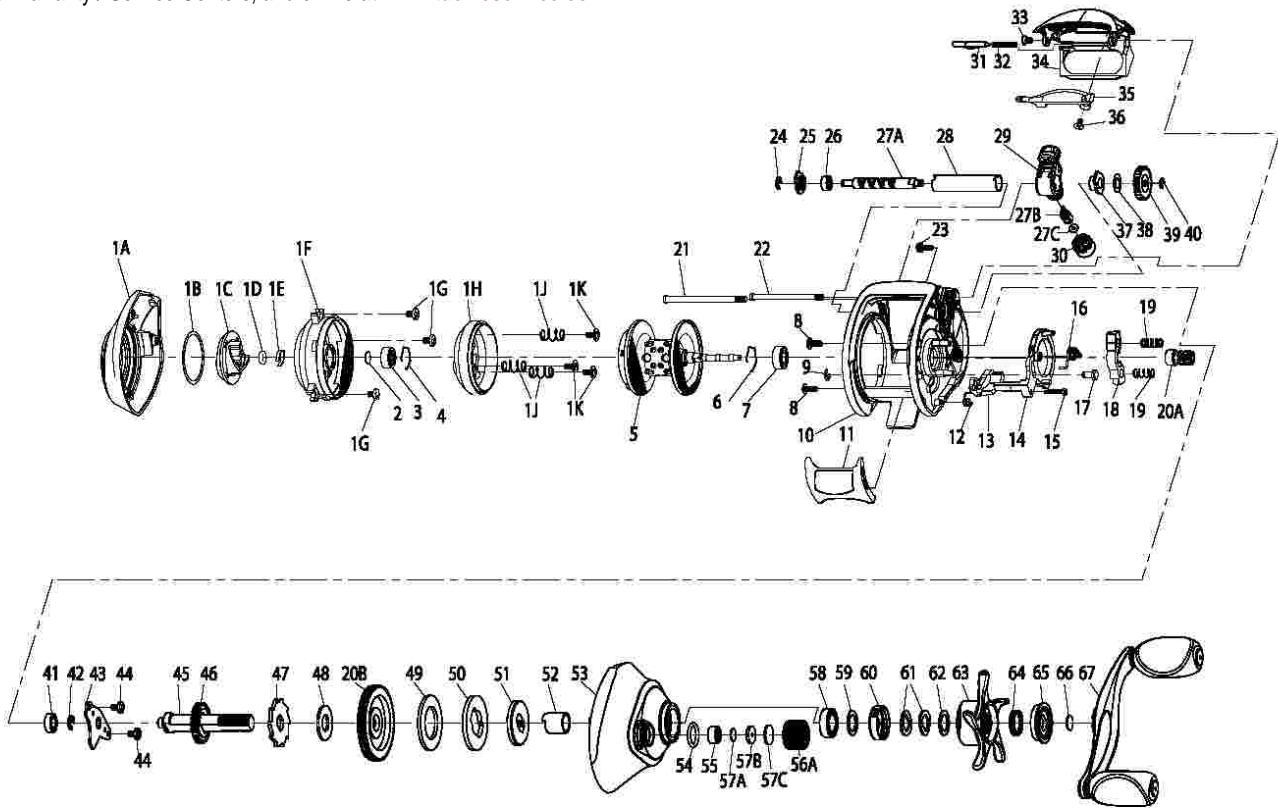

KEY#	DESCRIPTION	E770PT	E760PT	E750PT
1	Palm Side Cover Kit	UX4023-02	UX4023-02	UX4023-01
	1A - Palm Side Cover Ass.			
	1B - Centrifugal Dial Washer			
	1C - Centrifugal Dial Ass.			
	1D - Centrifugal Dial Friction Ring			
	1E - Centrifugal Dial Spring			
	1F - Spool Cover			
	1G - Spool Cover Screw			
	1H - Brake Ring Assembly			
	1J - Brake Ring Slider Spring			
	1K - Brake Ring Retainer Screw			
	2 - Spool Tension Shim			
	3 - Spool Shaft Ball Bearing (Palm)			
	4 - Clip Ring			
2	Spool Tension Shim	QW032-04	QW032-04	QW032-04
3	Spool Shaft Ball Bearing (Palm)	QV017-01	QV017-01	QV017-01
4	Clip Ring	HV080-01	HV080-01	HV080-01
5	Spool Assembly	UX321-04	UX321-02	UX321-01
6	Clip Ring	EX080-01	EX080-01	EX080-01
7	Spool Shaft Ball Bearing	EX017-02	EX017-02	EX017-02
8	Gear Side Cover Screw - B	QW053-01	QW053-01	QW053-01
9	E-Clip	NX092-01	NX092-01	NX092-01
10	Frame Assembly	UX001-05	UX001-02	UX001-01
11	Thumb Bar	UX009-01	UX009-01	UX009-01
12	Kick Lever Spring	GX097-01	GX097-01	GX097-01
13	Kick Lever	UX077-01	UX077-01	UX077-01
14	Release Slider	UX039-01	UX039-01	UX039-01
15	Thumb Bar Screw	ZW053-01	ZW053-01	ZW053-01
16	Release Slider Spring	CX104-01	CX104-01	CX104-01
17	Release Slider Spring Pin	UX102-01	UX102-01	UX102-01
18	Pinion Yoke	GX025-01	GX025-01	GX025-01
19	Yoke Spring	GX040-01	GX040-01	GX040-01
20	Gear Kit	VX4011-01	UX4011-01	WX4011-01
	20A - Pinion Gear Assembly			
	20B - Drive Gear			
21	Stabilizer Bar - B	UX061-01	UX061-01	UX061-01
22	Stabilizer Bar - A	VX061-01	VX061-01	VX061-01
23	Gear Side Cover Screw - A	BX123-01	BX123-01	BX123-01
24	E-Clip	NX092-01	NX092-01	NX092-01
25	Bearing Retainer	CX067-01	CX067-01	CX067-01
26	Worm Shaft Ball Bearing	XX117-01	XX117-01	XX117-01
27	Worm Shaft Kit	HV4072-02	HV4072-02	HV4072-02
	27A - Worm Shaft			
	27B - Line Guide Pawl			
	27C - Carrier Washer			

KEY#	DESCRIPTION	E770PT	E760PT	E750PT
28	Worm Shaft Guide	UX016-01	UX016-01	UX016-01
29	Line Guide Carrier	UX047-01	UX047-01	UX047-01
30	Line Guide Carrier Screw	ZW007-02	ZW007-02	ZW007-02
31	Side Cover Locking Lever	YX119-02	YX119-02	YX119-02
32	Side Cover Locking Lever Spring	ZW096-01	ZW096-01	ZW096-01
33	Hood Screw	HX107-01	HX107-01	HX107-01
34	Hood	UX027-01	UX027-01	UX027-01
35	Front Support	UX099-02	UX099-02	UX099-01
36	Front Support Screw	HX107-01	HX107-01	HX107-01
37	Worm Shaft Bushing (Gear)	HV068-01	HV068-01	HV068-01
38	O/S Pinion Gear Washer	EX035-01	EX035-01	EX035-01
39	O/S Pinion Gear	UX085-01	UX085-01	UX085-01
40	E-Clip	NX090-01	NX090-01	NX090-01
41	Crank Shaft Bearing - Lower	SW017-01	SW017-01	SW017-01
42	E-Clip	QW120-01	QW120-01	QW120-01
43	Crank Shaft Retainer	UX002-01	UX002-01	UX002-01
44	Crank Shaft Retainer Screw	JX107-01	JX107-01	JX107-01
45	Crank Shaft	UX008-01	UX008-01	UX008-01
46	O/S Drive Gear	UX112-01	UX112-01	UX112-01
47	Trip Ratchet	EX083-01	EX083-01	EX083-01
48	Trip Ratchet Washer	QW111-01	QW111-01	QW111-01
49	Drag Disc	UX059-01	UX059-01	UX059-01
50	Drag Key Washer	UX045-01	UX045-01	UX045-01
51	Link	UX036-01	UX036-01	UX036-01
52	One Way Bearing Sleeve	UX052-01	UX052-01	UX052-01
53	Gear Side Cover Assembly	UX324-05	UX324-02	UX324-01
54	Tension Knob O-Ring	QW101-01	QW101-01	QW101-01
55	Tension Knob Ball Bearing	SW117-01	SW117-01	SW117-01
56	Spool Tension Kit	CX4033-05	CX4032-01	CX4033-04
	56A - Spool Tension Knob Assembly			
	57 - Spool Tension Washer Kit			
57	Spool Tension Washer Kit	QW4032-01	QW4032-01	QW4032-01
	57A - Spool Tension Washer			
	57B - Spool Tension Washer			
	57C - Spool Cushion Washer			
58	Crank Shaft Ball Bearing	TW058-01	TW058-01	TW058-01
59	Star Drag Washer	ZW032-01	ZW032-01	ZW032-01
60	Drag Click Spring Assembly	YX4114-01	YX4114-01	YX4114-01
61	Spring D Washer	JX046-01	JX046-01	JX046-01
62	Star Drag Washer	ZW032-01	ZW032-01	ZW032-01
63	Star Drag	UX055-01	UX055-01	UX055-01
64	Handle Ratchet Spring	UX040-01	UX040-01	UX040-01
65	Handle Ratchet	UX054-01	UX054-01	UX054-01
66	Handle Washer	UX032-01	UX032-01	UX032-01
67	Handle Assembly	UX318-01	UX318-01	UX318-01