

Parts List

KEY#	DESCRIPTION	E70PT	E76PT	E750PT	E761PT
1	Palm Side Cover Kit	UX4023-02	UX4023-02	UX4023-01	VX4023-02
1A -	Palm Side Cover Ass.				
1B -	Centrifugal Dial Washer				
1C -	Centrifugal Dial Ass.				
1D -	Centrifugal Dial Friction Ring				
1E -	Centrifugal Dial Spring				
1F -	Spool Cover				
1G -	Spool Cover Screw				
1H -	Brake Ring Assembly				
1I -	Brake Ring Slider Spring				
1K -	Brake Ring Retainer Screw				
2 -	Spool Tension Shim				
3 -	Spool Shaft Ball Bearing (Palm)				
4 -	Clip Ring				
2	Spool Tension Shim	QW032-04	QW032-04	QW032-04	QW032-04
3	Spool Shaft Ball Bearing (Palm)	QV017-01	QV017-01	QV017-01	QV017-01
4	Clip Ring	HY080-01	HY080-01	HY080-01	HY080-01
5	Spool Assembly	UX321-04	UX321-02	UX321-01	UX321-05
6	Clip Ring	EX080-01	EX080-01	EX080-01	EX080-01
7	Spool Shaft Ball Bearing	EX017-02	EX017-02	EX017-02	EX017-02
8	Gear Side Cover Screw - B	QW053-01	QW053-01	QW053-01	QW053-01
9	E-Clip	NX092-01	NX092-01	NX092-01	NX092-01
10	Frame Assembly	UX001-05	UX001-02	UX001-01	UX001-01
11	Turnup Bar	UX009-01	UX009-01	UX009-01	UX009-01
12	Kick Lever Spring	GX097-01	GX097-01	GX097-01	MX097-01
13	Kick Lever	UX077-01	UX077-01	UX077-01	VX077-01
14	Release Slider	UX039-01	UX039-01	UX039-01	VX039-01
15	Turnup Bar Spring	ZM053-01	ZM053-01	ZM053-01	ZM053-01
16	Release Slider Spring	CX104-01	CX104-01	CX104-01	RX104-01
17	Release Slider Spring Pin	UX102-01	UX102-01	UX102-01	UX102-01
18	Pinion Yoke	GX025-01	GX025-01	GX025-01	GX025-01
19	Yoke Spring	GX040-01	GX040-01	GX040-01	GX040-01
20	Gear Kit	VX4011-01	VX4011-01	VX4011-01	UX4011-02
20A -	Pinion Gear Assembly				
20B -	Drive Gear				
21	Stabilizer Bar - B	UX061-01	UX061-01	UX061-01	UX061-01
22	Stabilizer Bar - A	VX061-01	VX061-01	VX061-01	VX061-01
23	Gear Side Cover Screw - A	BX123-01	BX123-01	BX123-01	BX123-01
24	E-Clip	NX092-01	NX092-01	NX092-01	NX092-01
25	Bearing Retainer	CX067-01	CX067-01	CX067-01	CX067-01
26	Worm Shaft Ball Bearing	XX117-01	XX117-01	XX117-01	XX117-01
27	Worm Shaft Kit	HY4072-02	HY4072-02	HY4072-02	HY4072-02
27A -	Worm Shaft				
27B -	Line Guide Pawl				
27C -	Carrier Washer				

KEY#	DESCRIPTION	E70PT	E76PT	E750PT	E761PT
28	Worm Shaft Guide	UX016-01	UX016-01	UX016-01	UX016-01
29	Line Guide Carrier	UX047-01	UX047-01	UX047-01	UX047-01
30	Line Guide Carrier Screw	ZM007-02	ZM007-02	ZM007-02	ZM007-02
31	Side Cover Locking Lever	YX119-02	YX119-02	YX119-02	YX119-02
32	Side Cover Locking Lever Spring	ZM096-01	ZM096-01	ZM096-01	ZM096-01
33	Head Screw	HX107-01	HX107-01	HX107-01	HX107-01
34	Head	UX027-01	UX027-01	UX027-01	UX027-01
35	Front Support	UX099-02	UX099-02	UX099-02	UX099-02
36	Front Support Screw	HX107-01	HX107-01	HX107-01	HX107-01
37	Worm Shaft Bushing (Gear)	HY068-01	HY068-01	HY068-01	HY068-01
38	O/S Pinion Gear Washer	EX035-01	EX035-01	EX035-01	EX035-01
39	O/S Pinion Gear	UX085-01	UX085-01	UX085-01	UX085-01
40	E-Clip	NX090-01	NX090-01	NX090-01	NX090-01
41	Crank Shaft Bearing - Lower	SW017-01	SW017-01	SW017-01	SW017-01
42	E-Clip	DM120-01	DM120-01	DM120-01	DM120-01
43	Crank Shaft Retainer	UX002-01	UX002-01	UX002-01	UX002-01
44	Crank Shaft Retainer Screw	JX107-01	JX107-01	JX107-01	JX107-01
45	O/S Drive Gear	UX112-01	UX112-01	UX112-01	UX112-01
46	Tip Ratchet	EX083-01	EX083-01	EX083-01	EX083-01
47	Tip Ratchet Washer	DM111-01	DM111-01	DM111-01	DM111-01
48	Drag Key	UX045-01	UX045-01	UX045-01	UX045-01
49	Drag Key Washer	UX036-01	UX036-01	UX036-01	UX036-01
50	Link	UX052-01	UX052-01	UX052-01	UX052-01
51	One Way Bearing Sleeve	UX324-02	UX324-02	UX324-02	UX324-02
52	Gear Side Cover Assembly	DM101-01	DM101-01	DM101-01	DM101-01
53	Tension Knob O-Ring	SM117-01	SM117-01	SM117-01	SM117-01
54	Tension Knob Ball Bearing	UX033-05	UX033-05	UX033-05	UX033-05
55	Spool Tension Kit				
56	56A - Spool Tension Knob Assembly				
57	Spool Tension Washer Kit	QW4032-01	QW4032-01	QW4032-01	QW4032-01
57A -	Spool Tension Washer				
57B -	Spool Tension Washer				
57C -	Spool Cushion Washer				
58	Crank Shaft Ball Bearing	TM058-01	TM058-01	TM058-01	TM058-01
59	Star Drag Washer	ZM032-01	ZM032-01	ZM032-01	ZM032-01
60	Drag Click Spring Assembly	YX4114-01	YX4114-01	YX4114-01	YX4114-01
61	Spring D Washer	JX046-01	JX046-01	JX046-01	JX046-01
62	Star Drag Washer	ZM032-01	ZM032-01	ZM032-01	ZM032-01
63	Star Drag	UX055-01	UX055-01	UX055-01	UX055-01
64	Handle Bracket Spring	UX040-01	UX040-01	UX040-01	UX040-01
65	Handle Bracket	UX054-01	UX054-01	UX054-01	UX054-01
66	Handle Washer	UX032-01	UX032-01	UX032-01	UX032-01
67	Handle Assembly	UX318-01	UX318-01	UX318-01	UX318-01