

IR3L, IR4CL, IR4CXL, IR3WL, IR4CWL PARTS LIST (L.H. RETRIEVE)

Key

No.	IR3L	IR4CL	IR4CXL	IR3WL	IR4CWL	Description
40	EV012-01	←	JV012-01	EV012-01	←	Drive Gear
41	JX059-01	←	←	←	←	Drag Disc
42	JX045-01	←	←	←	←	Drag "D" Washer
43	JX052-01	N/A	←	JX052-01	N/A	Spacer
43	N/A	CW052-01	CW052-01	N/A	CW052-01	Sleeve - One Way Bearing
44	TW058-01	←	←	←	←	Bearing - Crank Shaft (U)
45	JX038-01	←	←	←	←	Crank Shaft Washer
46	EV066-01	←	←	←	←	Crank Shaft Guide
47	JX073-01	←	←	←	←	O-Ring - Thumb Screw
48	JX074-03	N/A	N/A	JX074-04	N/A	Thumb Screw
48	N/A	XX374-01	XX374-01	N/A	XX372-02	Thumb Screw Assy
49	EV023-01	EV023-02	EV023-03	JV023-01	JV023-02	Left Side Cover
50	QW123-01	←	←	←	←	Screw - Left Side Cover
51	JX105-01	←	←	←	←	Spring - Tension Knob
52	QW032-02	←	←	←	←	Washer - Spool Tension
53	JX082-01	←	←	←	←	Washer - Cushion
54	XX033-01	←	←	←	←	Spool Tension Knob
55	JX046-01	←	←	←	←	Spring "D" Washer
56	EV055-01	N/A	N/A	EV055-01	N/A	Star Drag
56	N/A	XX355-03	←	N/A	XX355-03	Star Drag Assy
57	NX054-01	←	←	←	←	Handle Washer
58	XX318-01	UW318-01	←	XX318-01	UW318-01	Handle Assy
59	QW003-02	←	←	←	←	Handle Nut
60	JX034-02	←	←	←	←	Handle Nut Cap
61	QW123-01	←	←	←	←	Handle Nut Cap Screw
62	JX363-01	N/A	N/A	JX363-01	N/A	Anti Reverse Pawl Assy
62	N/A	UQ063-02	UQ063-02	N/A	UQ063-02	One Way Bearing
63	JX098-01	N/A	N/A	JX098-01	N/A	Post - Anti Reverse Pawl
64	N/A	N/A	N/A	XX025-01	←	Screw - Clicker Pawl
65	N/A	N/A	N/A	JX110-01	←	Clicker Spring
66	N/A	N/A	N/A	JV114-01	←	Clicker Pawl
67	N/A	N/A	N/A	JX084-01	←	Clicker Cam
68	N/A	N/A	N/A	JX125-01	←	Screw - Clicker Spring Holder
69	N/A	N/A	N/A	JV103-01	←	Clicker Spring Holder