Daiwa
COMMITTED TO TOTAL QUALITY

*Please order by part number, not key number.*

# SPINNING REEL TEAM DAIWA-X3500i/4000i

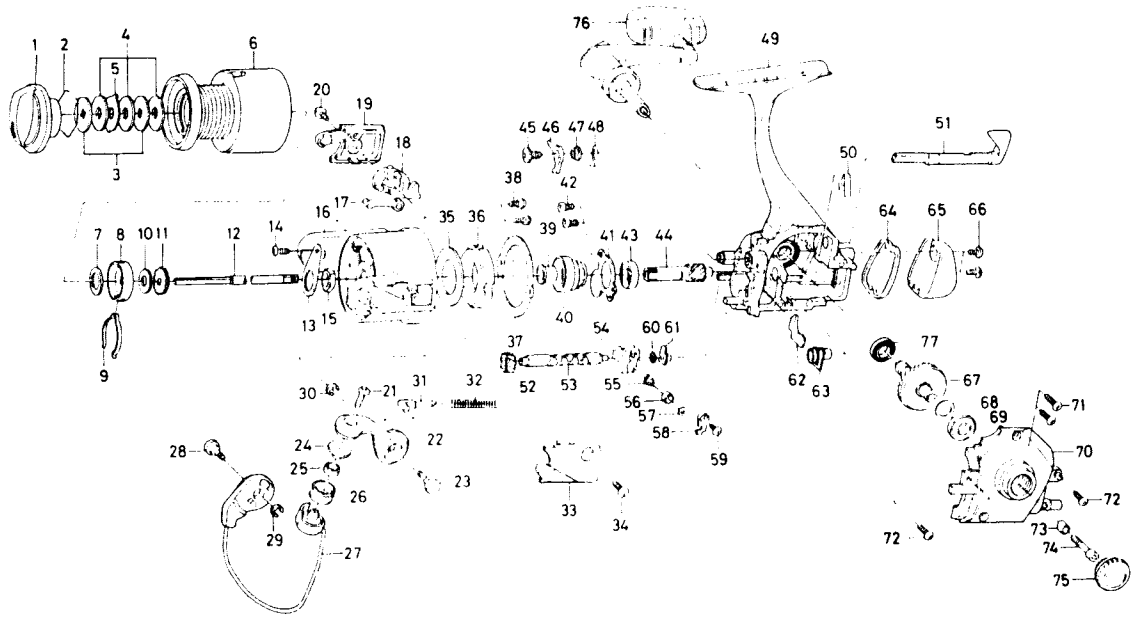


| Key NO. | Parts No. | Parts Name |
|---|---|---|
| 2-6 | F18-6506 | Spool assembly |
| 1 | F20-4604 | Drag knob |
| 2 | 170-4101 | Drag washer retainer |
| 3 | E27-7801 | Key washer |
| 4 | B36-0204 | Drag washer |
| 5 | 372-3832 | Eared washer |
| 6 | F18-6606 | Spool assembly |
| 7 | E39-7901 | Spool washer |
| 8 | E12-2302 | Click leaf spring holder |
| 9 | B74-7702 | Spool click leaf spring |
| 10 | 375-4202 | Main shaft washer |
| 11 | E41-3101 | Click gear |
| 12 | F18-5801 | Main shaft |
| 13 | F18-9601 | Rotor nut holding plate |
| 14 | B93-3001 | Rotor nut holding plate screw |
| 15 | B10-5701 | Rotor nut |
| 16 | F30-8002 | Rotor |
| 17 | F08-0702 | Bail trip plate |
| 18 | F01-4401 | Bail trip lever |
| 19 | F18-2807 | Bail trip cover |
| 20 | E33-0403 | Bail trip cover screw |
| 21 | B67-9306 | Line roller screw |
| 22 | F17-6505 | Bail arm |
| 23 | F15-2501 | Bail arm screw |
| 24 | F06-6301 | Line roller collar |
| 25 | F05-5601 | Ball bearing A |
| 26 | F30-5101 | Line roller |
| 27 | F33-5601 | Bail assembly |
| 28 | F15-2501 | Bail trip cam screw |
| 29 | 320-5901 | Bail trip cam screw retainer |
| 30 | 320-5901 | Bail arm screw retainer |
| 31 | F24-6801 | Bail spring shaft |
| 32 | E39-0601 | Bail spring |
| 33 | F18-2507 | Bail spring cover |
| 34 | E24-8103 | Bail spring cover screw |
| 35 | F19-7302 | Oiled washer |
| 36 | F18-2901 | Roller clutch |
| 37 | F18-3001 | Roller clutch retainer |
| 38 | E15-7502 | Roller clutch retainer screw |
| 39 | F18-1301 | Spacing sleeve |
| 40 | F18-1401 | Anti-reverse ratchet |
| 41 | F18-1201 | Bearing relainer |

| Key NO. | Parts No. | Parts Name |
|---|---|---|
| 42 | B83-4402 | Bearing relainer screw |
| 43 | 635-4801 | Ball bearing B |
| 44 | F26-5101 | Pinion gear |
| 45 | L00-1801 | Anti-reverse pawl screw |
| 46 | F18-1801 | Anti-reverse pawl |
| 47 | F18-1701 | Anti-reverse pawl collar |
| 48 | F37-4501 | Anti-reverse pawl spring |
| 49 | F26-5002 | Body assembly |
| 50 | E32-7801 | Anti-reverse cam spring |
| 51 | F18-1003 | Anti-reverse lever |
| 52 | E42-0501 | Worm shaft gear |
| 53 | F30-7802 | Worm shaft |
| 54 | E37-6301 | Oscillating slider |
| 55 | E19-1202 | Oscillating pawl |
| 56 | E19-1301 | Oscillating pawl bush |
| 57 | 375-0801 | Oscillating pawl washer |
| 58 | E37-6901 | Oscillating slider cover |
| 59 | E40-1501 | Oscillating slider cover screw |
| 60 | B53-6102 | Worm shaft washer |
| 61 | F05-6901 | Worm shaft collar |
| 62 | E48-2801 | Shield plate |
| 63 | E48-2701 | Pinion collar |
| 64 | F18-3405 | Water shield |
| 65 | F18-3505 | Rearcover |
| 66 | E36-4203 | Rear cover screw |
| 67 | E41-8603 | Drive gear |
| 68 | 373-7802 | Drive gear washer |
| 69 | E15-4001 | Ball bearing C |
| 70 | F18-2303 | Side cover |
| 71 | E15-8603 | Side cover screw A |
| 72 | E15-7502 | Side cover screw B |
| 73 | F18-3701 | Handle collar |
| 74 | F38-7101 | Handle screw |
| 75 | F33-5901 | Handle screw cap |
| 76 | F33-5702 | Handle assembly |
| 77 | B86-1701 | Ball bearng D |

**X4000i Special parts**

| | | |
|---|---|---|
| 2-6 | F18-6806 | Spool assembly |
| 6 | F18-6906 | Spool assembly |
| 16 | F30-9402 | Rotor |
| 27 | F33-6001 | Bail assembly |