


# SPINNING REEL 4000C & 4000SC

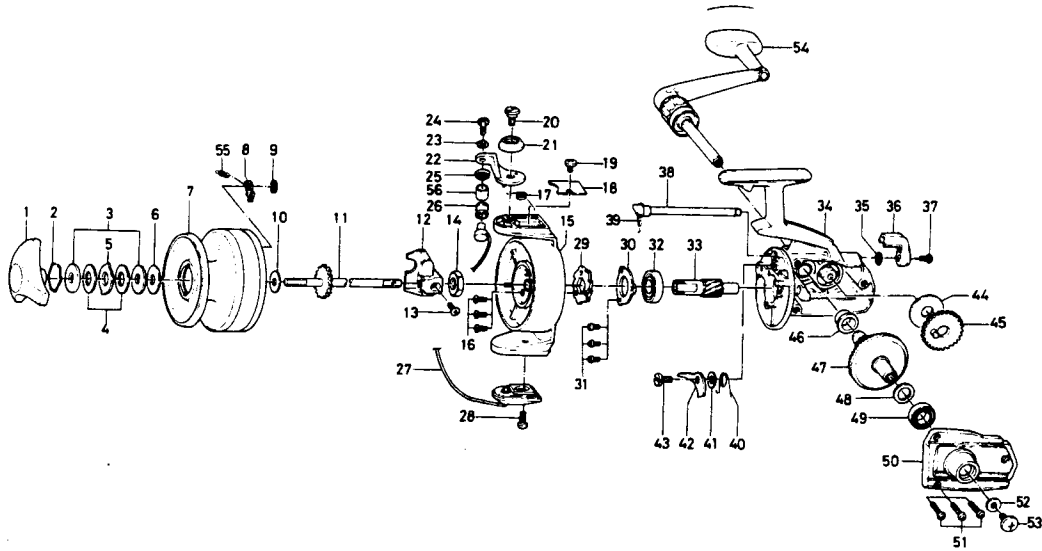

**KEY NO. 2 ~ 9**

6B18-0001

**SPOOL ASSEMBLY**

**SPECIAL PARTS FOR 4000SC**

6-280-7201

**RATCHET**

Key No.	Parts No.	Parts Name	Key No.	Parts No.	Parts Name
1	6-000-8241	Drag knob	29	6-280-4101	Ratchet
2	6-170-4511	Drag washer retainer	30	6-634-7011	Ball bearing ret. washer
3	6-372-7812	Drag D washer	31	6-351-6601	Ball bearing ret. washer screw
4	6-372-9011	Disc washer	32	6-635-5001	Ball bearing
5	6-375-5401	Drag A washer	33	6-401-6701	Pinion gear
6	6-372-7701	Drag washer A	34	6-700-1623	Body
7	6-B17-9801	Spool	35	6-373-2700	Anti-reverse lever washer
8	6-B07-8201	Spool click claw	36	6-540-8321	Anti-reverse lever
9	6-320-1402	Spool click claw retainer	37	6-352-2501	Anti-reverse lever screw
10	6-376-1701	Spool washer	38	6-710-7901	Anti-reverse cam
11	6-710-2214	Main shaft	39	6-142-3511	Anti-reverse cam spring
12	6-480-7801	Oscillating slider	40	6-142-3421	Anti-reverse claw spring
13	6-351-8901	Oscillating slider screw	41	6-373-2701	Anti-reverse claw washer
14	6-340-8301	Rotor nut	42	6-110-9701	Anti-reverse claw
15	6-201-2223	Rotor	43	6-362-4211	Anti-reverse claw screw
16	6-352-0901	Ratchet screw	44	6-374-5401	Oscillating gear washer
17	6-144-2201	Bail spring	45	6-412-3611	Oscillating gear
18	6-633-0701	Bail spring cover	46	6-501-5201	Bearing metal
19	6-351-1801	Bail spring cover screw	47	6-412-3503	Drive gear
20	6-363-1901	Arm lever screw	48	6-371-2800	Drive gear washer
21	6-130-3201	Bail holder cap	49	6-636-6011	Ball bearing
22	6-231-1901	Arm lever	50	6-705-1618	Body cover
23	6-375-1101	Bail washer	51	6-351-5901	Body cover screw
24	6-363-3111	Bail screw	52	6-371-9521	Handle washer
25	6-501-2001	Roller collar	53	6-351-3631	Handle screw
26	6-250-4321	Line roller	54	6-746-8702	Handle
27	6-725-1219	Bail	55	6-145-2101	Spool click claw spring
28	6-351-6401	Bail holder screw	56	6-502-1401	Roller metal