


BAITCASTING REEL

Millionaire 5H/5B/6H/6B

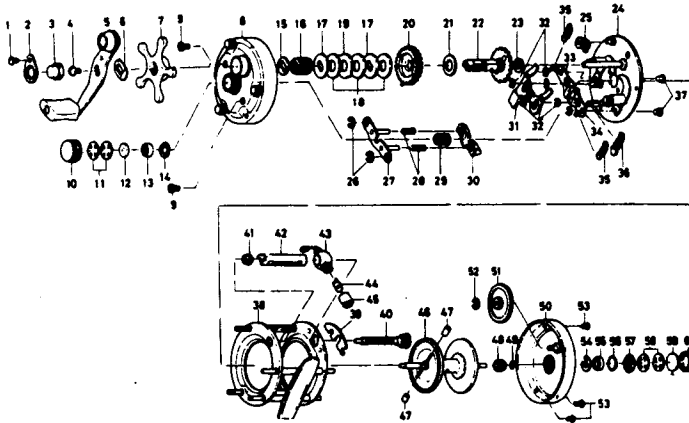

Key No.	Parts No.	Parts Name
Millionaire 5B		
1	6-353-0501	Handle nut plate screw
2	6-040-3201	Handle nut plate
3	6-341-5801	Handle nut
4	6-353-0701	Handle screw
5	6-745-8701	Handle
6	6-150-9001	Handle washer
7	6-780-9801	Star drag
8	6-780-9401	Right side cover
9	6-353-1701	Right side cover screw
10	6-342-0801	Right spool cap
11	6-373-7501	Ball bearing ret. washer
12	6-320-4101	Ball bearing retainer A
13	6-634-6701	Ball bearing
14	6-320-6501	Ball bearing ret. ring
15	6-374-9401	Drag washer A
16	6-143-9201	Drag coil spring
17	6-374-9401	Drag washer B
18	6-374-9302	Drag washer C
19	6-374-9501	Drag washer D
20	6-412-9901	Drive gear
21	6-374-9303	Gear shaft washer A
22	6-725-4611	Gear shaft
23	6-373-7611	Gear shaft washer B
24	6-780-9501	Set plate
25	6-770-0301	Anti-reverse claw
26	6-320-8002	Pinion yoke guide plate ret. ring
27	6-780-9701	Pinion yoke guide plate
28	6-143-9311	Pinion yoke spring
29	6-402-1901	Pinion gear
30	6-635-9201	Pinion yoke
31	6-780-9601	Clutch lever
32	6-320-8202	Clutch ret. ring
33	6-040-4701	Clutch stopper plate A
34	6-040-4801	Clutch stopper plate B
35	6-142-8503	Set plate spring A
36	6-142-8502	Set plate spring B
37	6-121-6801	Set plate screw
38	6-780-9901	Frame
39	6-151-4111	Worm shaft lock arm
40	6-710-7711	Worm shaft

Key No.	Parts No.	Parts Name
41	6-021-7201	Shield bush
42	6-634-6101	Worm shield
43	6-781-0201	Line guide
44	6-121-4211	Line guide pin
45	6-341-5901	Line guide nut
46	6-735-3701	Spool
47	6-500-8011	Brake collar
48	6-402-2001	Spool gear
49	6-320-4202	Spool gear ret. ring
50	6-781-0311	Left side cover
51	6-413-0001	Cog wheel
52	6-320-8002	Cog wheel ret. ring
53	6-352-4221	Left cover screw
54	6-320-6501	Ball bearing ret. ring
55	6-634-6701	Ball bearing
56	6-170-6701	"O" ring
57	6-320-7711	Ball bearing retainer B
58	6-373-7501	Ball bearing ret. washer
59	6-374-7221	Rubber washer
60	6-342-1001	Left spool cap

Millionaire 5H Special Parts		
20	6-413-0301	Drive gear
29	6-750-2401	Pinion gear
50	6-781-0308	Left side cover

Millionaire 6B Special Parts		
38	6-781-0801	Frame
40	6-710-8211	Worm shaft
42	6-634-6102	Worm shield
46	6-735-3901	Spool
50	6-781-0309	Left side cover

Millionaire 6H Special Parts		
20	6-413-0301	Drive gear
29	6-750-2401	Pinion gear
38	6-781-0801	Frame
40	6-710-8211	Worm shaft
42	6-634-6102	Worm shield
46	6-735-3901	Spool
50	6-781-0310	Left side cover