




# SPINNING REEL

# SA3500 / SA3500BH / SA3500H / SA3500HBH SA4000 / SA4000BH / SA4000H / SA4000HBH

Please order by parts number, not key number  
Bitte, Best.-Nr. angeben (Nicht "key" -nr.)  
Veuillez indiquer le numero de la piece (Non "key" no.)

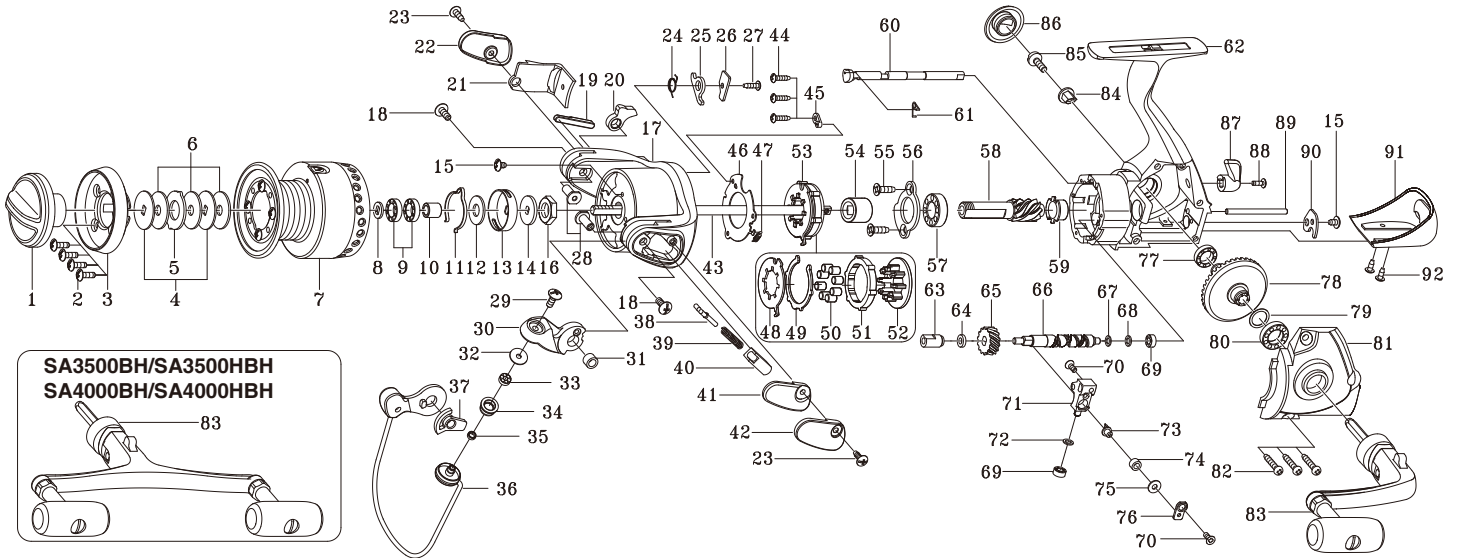

Key NO.	Parts No.	Parts name	Key NO.	Parts No.	Parts name	Key NO.	Parts No.	Parts name
2-7	2YT-151-01	SPOOL TOTAL ASSEMBLY	50	2Z3-003-01	ROLLER	78	2G1-057-01	DRIVE GEAR
1	2YD-030-03	DRAG KNOB ASSEMBLY	51	2A3-025-01	ANTI-REVERSE RATCHET	SA3500HBH	SPECIAL PARTS	SA3500HBH SPECIAL PARTS
2	2E2-005-03	B26M-080 SCREW	52	2F8-082-01	CAGE	2-7	2YT-151-03	SPOOL TOTAL ASSEMBLY
3	2S5-029-01	LIP COVER	53	2YZ-017-01	ONE-WAY CLUTCH BEARING ASSEMBLY	7	2YS-072-03	SPOOL ASSEMBLY
4	2W2-005-01	KEY WASHER	54	2A4-026-01	ONE-WAY CLUTCH INNER TUBE	58	2G2-074-01	PINION GEAR
5	2W3-003-01	EARED WASHER	55	2E1-068-01	F30-100 SCREW	65	2G3-031-01	OSCILLATING GEAR
6	2W1-052-02	050-187 WASHER	56	2F5-203-01	BEARING RETAINER	78	2G1-057-01	DRIVE GEAR
7	2YS-072-01	SPOOL ASSEMBLY	57	2Z1-005-02	816-5 BALL BEARING	83	2YH-092-01	HANDLE TOTAL ASSEMBLY
8	2W2-014-01	KEY WASHER	58	2G2-005-01	PINION GEAR	SA4000	SPECIAL PARTS	SA4000 SPECIAL PARTS
9	2Z1-009-01	711-3 BALL BEARING	59	2C2-070-01	PINION GEAR BUSH	2-7	2YT-153-01	SPOOL TOTAL ASSEMBLY
10	2C1-057-01	INSERT METAL	60	2A2-028-01	ANTI-REVERSE CAM	7	2YS-074-01	SPOOL ASSEMBLY
11	2L3-014-01	CLICK LEAF SPRING	61	2Q3-009-01	ANTI-REVERSE SPRING	17	2YR-060-01	ROTOR ASSEMBLY
12	2W1-053-02	080-185 WASHER	62	2YB-132-01	BODY ASSEMBLY	21	2R4-110-01	BAIL TRIP COVER SPACER
13	2F8-013-02	CLICK LEAF SPRING HOLDER	63	2C2-049-01	WORM SHAFT BUSH C	25	2R5-108-01	BAIL TRIP LEVER
14	2W2-024-01	KEY WASHER	64	2C1-048-02	WORM SHAFT COLLAR	36	2YL-096-01	BAIL ASSEMBLY
15	2E1-036-01	B26-040 SCREW	65	2G3-018-01	OSCILLATING GEAR	62	2YB-132-02	BODY ASSEMBLY
16	2E3-002-01	ROTOR NUT	66	2M4-018-01	WORM SHAFT	SA4000BH	SPECIAL PARTS	SA4000BH SPECIAL PARTS
17	2YR-059-01	ROTOR ASSEMBLY	67	2W1-058-02	030-050 WASHER	2-7	2YT-153-01	SPOOL TOTAL ASSEMBLY
18	2E2-018-01	B30M-080 SCREW	68	2W1-058-03	030-050 WASHER	7	2YS-074-01	SPOOL ASSEMBLY
19	2R5-106-01	BAIL TRIP PLATE	69	2Z1-014-01	306-2.5 BALL BEARING	17	2YR-060-01	ROTOR ASSEMBLY
20	2R5-104-01	BAIL TRIP LEVER A	70	2E2-009-01	F23M-060 SCREW	21	2R4-110-01	BAIL TRIP COVER SPACER
21	2R4-109-01	BAIL TRIP COVER SPACER	71	2M1-032-01	OSCILLATING SLIDER	25	2R5-108-01	BAIL TRIP LEVER
22	2F5-207-01	BAIL TRIP COVER	72	2W1-058-04	030-050 WASHER	36	2YL-096-01	BAIL ASSEMBLY
23	2E1-016-03	B26-080 SCREW	73	2M5-007-01	LINE GUIDE PIN	62	2YB-132-02	BODY ASSEMBLY
24	2Q3-056-01	BAIL TRIP LEVER SPRING	74	2C2-034-01	LINE GUIDE PIN BUSH	83	2YH-092-01	HANDLE TOTAL ASSEMBLY
25	2R5-107-01	BAIL TRIP LEVER	75	2W1-059-01	020-049 WASHER	SA4000H	SPECIAL PARTS	SA4000H SPECIAL PARTS
26	2W5-037-01	SPACER	76	2F5-181-01	OSCILLATING SLIDER COVER	2-7	2YT-153-03	SPOOL TOTAL ASSEMBLY
27	2E1-048-02	B22-080 SCREW	77	2Z1-010-02	812-3.5 BALL BEARING	7	2YS-074-03	SPOOL ASSEMBLY
28	2E3-040-02	SHAFT NUT	78	2G1-010-01	DRIVE GEAR	17	2YR-060-01	ROTOR ASSEMBLY
29	2E2-018-02	B30M-080 SCREW	79	2W1-035-00	080-105 WASHER	21	2R4-110-01	BAIL TRIP COVER SPACER
30	2R2-036-01	BAIL ARM	80	2Z1-004-01	814-3.5 BALL BEARING	25	2R5-108-01	BAIL TRIP LEVER
31	2C2-082-01	BAIL ARM BUSH	81	2B2-035-01	BODY COVER	36	2YL-096-01	BAIL ASSEMBLY
32	2C1-034-01	LINE ROLLER COLLAR	82	2E1-006-03	A30-130 SCREW	58	2G2-074-01	PINION GEAR
33	2Z1-012-02	407-2.5 BALL BEARING	83	2YH-090-01	HANDLE TOTAL ASSEMBLY	62	2YB-132-02	BODY ASSEMBLY
34	2R6-020-01	LINE ROLLER	84	2C3-023-01	HANDLE SCREW SLEEVE	65	2G3-031-01	OSCILLATING GEAR
35	2C2-032-01	LINE ROLLER BUSH	85	2E2-023-01	a30M-120 SCREW	78	2G1-057-01	DRIVE GEAR
36	2YL-095-01	BAIL ASSEMBLY	86	2H6-010-01	HANDLE SCREW CAP	SA4000HBH	SPECIAL PARTS	SA4000HBH SPECIAL PARTS
37	2F6-033-01	HOLDING PLATE	87	2A1-022-01	ANTI-REVERSE LEVER	2-7	2YT-153-03	SPOOL TOTAL ASSEMBLY
38	2R5-101-01	BAIL TRIP SHAFT	88	2E2-013-03	B20M-060 SCREW	7	2YS-074-03	SPOOL ASSEMBLY
39	2Q1-075-01	BAIL SPRING	89	2P1-025-01	OSCILLATING SLIDER PIN	17	2YR-060-01	ROTOR ASSEMBLY
40	2C2-081-01	BAIL SPRING GUIDE	90	2F5-182-01	WORM SHAFT COVER	21	2R4-110-01	BAIL TRIP COVER SPACER
41	2R4-106-01	BAIL SPRING COVER SPACER	91	2YN-004-01	NAMEPLATE ASSEMBLY	25	2R5-108-01	BAIL TRIP LEVER
42	2F5-206-01	BAIL SPRING COVER	92	2E1-020-01	B22-055 SCREW	36	2YL-096-01	BAIL ASSEMBLY
43	2M3-058-01	MAIN SHAFT	SA3500BH	SPECIAL PARTS	SA3500BH SPECIAL PARTS	58	2G2-074-01	PINION GEAR
44	2E1-029-01	B22-090 SCREW	83	2YH-092-01	HANDLE TOTAL ASSEMBLY	62	2YB-132-02	BODY ASSEMBLY
45	2F8-079-01	ANTI-REVERSE SPRING ANCHOR	SA3500H	SPECIAL PARTS	SA3500H SPECIAL PARTS	65	2G3-031-01	OSCILLATING GEAR
46	2F5-189-01	ROLLER CLUTCH RETAINER	2-7	2YT-151-03	SPOOL TOTAL ASSEMBLY	78	2G1-057-01	DRIVE GEAR
47	2Q2-016-01	SPRING	7	2YS-072-03	SPOOL ASSEMBLY	83	2YH-092-01	HANDLE TOTAL ASSEMBLY
48	2F2-027-01	ANTI-REVERSE PAWL	58	2G2-074-01	PINION GEAR			
49	2W5-036-01	WASHER	65	2G3-031-01	OSCILLATING GEAR			